

**STV33**

# INSTALLATION & OPERATION INSTRUCTIONS

English (EN)

 
Date: 06-2017

Document number: 81373-1

© 2017 Raymarine UK Limited

**Raymarine®**

### Raymarine STV33 Serial Number



This serial number will be requested for all troubleshooting or service Inquiries.

### **Notice All Rights Reserved**

Raymarine® is a registered trademark of Raymarine Belgium BVBA. All other trademarks contained in this document are the registered trademarks of Intellian Technologies, Inc., and should not be appropriated without permission by Intellian Technologies, Inc. The information contained in this manual is the property of Raymarine. Any and all parts of this manual shall not be reproduced and distributed in any form without prior written consent by Raymarine. The information contained in this manual shall be subject to change at any time without notice due to the functional upgrade of the product.



<b>INTRODUCTION</b> .....	<b>7</b>	<b>ANTENNA CONTROL SOFTWARE</b> .....	<b>55</b>
INTRODUCTION TO Raymarine STV33 .....	7	INTRODUCTION TO Aptus® .....	55
FEATURES OF Raymarine STV33 .....	8	SOFTWARE INSTALLATION .....	55
BASIC SYSTEM CONFIGURATION OF Raymarine STV33 .....	9	PC TO ACU COMMUNICATION SETUP .....	56
<b>INSTALLATION</b> .....	<b>10</b>	ESTABLISH A DATA COMMUNICATION .....	56
SYSTEM COMPONENTS .....	10	AUTO UPDATE .....	57
TOOLS REQUIRED FOR INSTALLATION .....	13	TOOLBAR MENUS .....	58
PLANNING THE INSTALLATION .....	<b>14</b>	SYSTEM PROPERTY STATUS DASHBOARD .....	61
INSTALLATION AND MOUNTING OF ANTENNA .....	16	WORK VIEW TABS .....	64
<b>INSTALLING THE ACU</b> .....	<b>19</b>	<b>PREPARATION FOR TRANSPORTATION</b> .....	<b>75</b>
ACU DIMENSIONS .....	19	<b>WARRANTY</b> .....	<b>76</b>
SELECTING ACU INSTALLATION SITE .....	20	<b>APPENDIX : TECHNICAL SPECIFICATION</b> .....	<b>77</b>
CONNECTING THE SYSTEM CABLES .....	21		
CONNECTING THE SYSTEM TO A GPS .....	24		
DC OUT PORT .....	<b>25</b>		
ADJUSTING THE LNB SKEW ANGLE (LINEAR POLARIZATION ONLY) .....	<b>26</b>		
PC TO ACU COMMUNICATION SETUP .....	27		
<b>OPERATION INSTRUCTION</b> .....	<b>29</b>		
INTRODUCTION .....	29		
<b>OPERATION USING THE ACU</b> .....	<b>27</b>		
ACU SOFT KEYS .....	30		
NORMAL MODE .....	<b>30</b>		
SETUP MODE .....	<b>33</b>		

## Safety notices



### **Warning: Product installation and operation**

This product must be installed and operated in accordance with the instructions provided. Failure to do so could result in personal injury, damage to your boat and/or poor product performance.

### **Caution: Power supply protection**

When installing this product ensure the power source is adequately protected by means of a suitably-rated fuse or automatic circuit breaker.

### **Caution: Use correct lifting point**

When lifting the antenna unit, always lift from the base plate. Do NOT use the antenna cover or damage to the cover could occur.

### **Caution: Do not damage connectors**

Take care to avoid damage to the connectors underneath the antenna base plate when moving the unit. Do NOT use these connectors to lift the unit.

### **Caution: Remove transit packing**

Before installing or operating the product, open the antenna unit cover and remove the foam transit packing inserts from the unit base.

### **Caution: Antenna coating**

Do NOT paint or apply any other finish to the antenna. This could degrade performance beyond acceptable limits.



Please carefully read and follow the installation, operating and maintenance procedures, to ensure optimum performance.

## Geographic location

Your STV system will operate in various geographic regions, dependant upon the type of satellite signal available.

Broadly speaking different regions around the globe use either circular or linear polarization for DVB satellite broadcasts. Each STV unit is configured to receive either Linear or Circular polarized signals.

Some examples of regions using circular and linear polarization are below.

### Circular polarization:

- North America

### Linear polarization:

- Europe
- Australia
- New Zealand
- China
- Middle East

For further assistance please refer to your regional satellite service providers or Raymarine technical support.

## Changing location

If you change your area of operation, you may need to arrange for modification to your STV system.

- Adjust the antenna low noise block (LNB) as appropriate for the area in which you are operating.
- Update the region information using your control unit (ACU) or a PC running the GUI software.
- Ensure that your satellite receivers (IRDs) will operate and receive DVB broadcasts at your new location.

**Important:** Please refer all servicing / component replacement to authorized Raymarine agents.

## Satellite coverage

Up to date coverage maps and satellite information may be found on the appropriate website of your satellite service provider.

## Television reception

For full functionality of your STV System, you must subscribe to the relevant service(s) from the appropriate service provider(s). Full details of service providers are given.

## EMC installation guidelines

Raymarine equipment and accessories conform to the appropriate Electromagnetic Compatibility (EMC) regulations, to minimize electromagnetic interference between equipment and minimize the effect such interference could have on the performance of your system

Correct installation is required to ensure that EMC performance is not compromised.

For **optimum** EMC performance we recommend that wherever possible:

- Raymarine equipment and cables connected to it are:
  - At least 1 m (3 ft) from any equipment transmitting or cables carrying radio signals e.g. VHF radios, cables and antennas.

In the case of SSB radios, the distance should be increased to 7 ft (2 m).

- More than 2 m (7 ft) from the path of a radar beam. A radar beam can normally be assumed to spread 20 degrees above and below the radiating element.
- The product is supplied from a separate battery from that used for engine start. This is important to prevent erratic behavior and data loss which can occur if the engine start does not have a separate battery.
- Raymarine specified cables are used.
- Cables are not cut or extended, unless doing so is detailed in the installation manual.

**Note: Where constraints on the installation prevent any of the above recommendations**, always ensure the maximum possible separation between different items of electrical equipment, to provide the best conditions for EMC performance throughout the installation

## Suppression ferrites

Raymarine cables may be fitted with suppression ferrites. These are important for correct EMC performance. If a ferrite has to be removed for any purpose (e.g. installation or maintenance), it must be replaced in the original position before the product is used.

Use only ferrites of the correct type, supplied by Raymarine authorized dealers.

## Connections to other equipment

Requirement for ferrites on non-Raymarine cables

If your Raymarine equipment is to be connected to other equipment using a cable not supplied by Raymarine, a suppression ferrite **MUST** always be attached to the cable near the Raymarine unit.

## Product disposal

Dispose of this product in accordance with the WEEE Directive.



The Waste Electrical and Electronic Equipment (WEEE) Directive requires the recycling of waste electrical and electronic equipment. Whilst the WEEE Directive does not apply to some Raymarine products, we support its policy and ask you to be aware of how to dispose of this product.

## Warranty registration

To register your STV Satellite television system ownership, please take a few minutes to fill out the warranty registration card found in the box, or visit [www.raymarine.com](http://www.raymarine.com) and register on-line.

It is important that you register your product to receive full warranty benefits. Your unit package includes a bar code label indicating the serial number of the unit. You should stick this label to the warranty registration card.

## Technical accuracy

To the best of our knowledge, the information in this document was correct at the time it was produced. However, Raymarine cannot accept liability for any inaccuracies or omissions it may contain. In addition, our policy of continuous product improvement may change specifications without notice. As a result, Raymarine cannot accept liability for any differences between the product and this document.

---

# Introduction

## Introduction to Raymarine STV33

Raymarine STV33 is a digital satellite antenna system designed specifically for all types of vessels (Anchored or transit) to automatically identify, track and capture satellite signals from the Digital Video Broadcasting (DVB: the international standard for digital TV transmissions) compatible satellites.

Specifically, Raymarine STV33 has Wide Range Search (WRS) algorithm, which minimizes the search time during initialization, and Dynamic Beam Tilting (DBT) technology, which dynamically shapes the antenna beam to utilize stabilization. While tracking the target satellite, DBT technology uses a high-performance, constantly adjusting sub-reflector which allows the antenna to remain relatively still, eliminating the constant whine of stepper motors while staying locked onto the satellites.

For simplicity and savings, the STV33 brings you hassle-free installation with its single cable design between the antenna and the control unit. For flexibility, there is a second RF connector on the antenna base. In addition, the STV33 has adopted a built-in GPS interface (NMEA 0183,) allowing boaters to plug-in an external GPS to speed up acquisition time.



### Features of Raymarine STV33

#### Enjoy satellite broadcasts at sea

Raymarine STV33 is the most modern antenna system that enables you to receive high quality broadcasting signals at sea where the atmospheric and environmental conditions are very harsh.

#### Fully automatic control system

The fully automatic control system allows you to simply turn the power switch on, and have crystal clear, high quality satellite television in motion or at anchor.

#### High quality antenna

High tech parabolic antenna technology has been adopted for this antenna system, which is optimal for marine conditions. This enables you to receive the optimal signal level even when it is raining or snowing.

#### Fast and efficient search for the satellite

The WRS (Wide Range Search) algorithm allows for the antenna system to search the satellite within the shortest amount of time and to detect the satellite signal under any position and within any directional movement of the ship.

#### Outstanding reliability

Raymarine STV33 provides a highly reliable system through the implementation of a modularized design and the use of strictly-proven components.

#### Easy installation

Raymarine STV33 uses only one RF cable for installation. Power, RF, and Data signals transfer from the antenna to the ACU through this single cable.

#### Compact size

Raymarine STV33's small and compact size is perfect for small vessels.

#### Ethernet Port for management

The Ethernet Port on the rear panel of the ACU enables direct and simple network connection between a PC and the ACU. By connecting to ISP or the modem linked with VSAT systems, Raymarine STV33 can be monitored, controlled, and diagnosed remotely from anywhere, anytime through the TCP/IP protocol. This not only can save tremendous time but also save the cost generated from the hundreds of routine maintenance activities such as operating firmware upgrades, tracking parameters resets, and system diagnostics.

#### Wireless Connectivity and Aptus mobile

The built-in WiFi enables the ACU to be wirelessly connected. Any kind of wireless devices such as PCs, laptops and smartphones can be used to connect to the ACU and monitor, control and change the settings of the system wirelessly. The Aptus mobile app is available for download to access the ACU via Wi-Fi and operate the antenna from an iPhone, iPad or other network devices. iPhone and iPad are registered trademarks of Apple Inc.

---


## Basic System Configuration of Raymarine STV33

For your satellite TV system to function properly, the system will have to be connected with all of the provided components as shown on the right (Refer to the next chapter 'Installation' in this manual for more detailed connection instructions). Separate purchase of a satellite receiver and a TV is required.

---

**Note:** Dish Network and Bell TV users please refer to the separate Dish Network MIM Installation and User Manual.

---

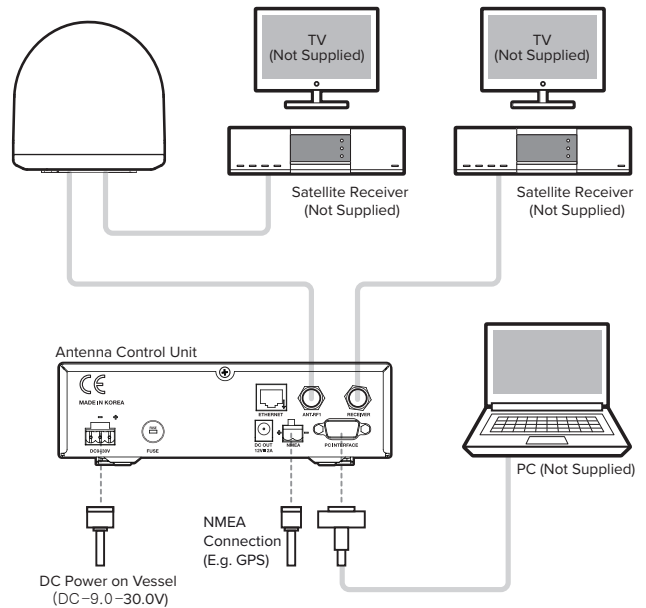

**Figure 01 : Basic Configuration with 2 Receivers**

# Installation

The components of the Raymarine STV33 have been designed to be modular so that it is suitable for simple installation on all types of vessels.

## System Components

### Antenna Unit

The Raymarine STV33 system comprises the following components for optimum search and reception of the satellite signal.

- **Mechanical Unit** – manipulates the antenna to receive an optimal satellite signal, regardless of the movement of the vessel.
- **Control Unit** – controls mechanical operation of the antenna.
- **RF Unit** – transmits an optimum satellite signal to the receiver.
- **Radome** – protects the antenna from severe marine environmental elements.

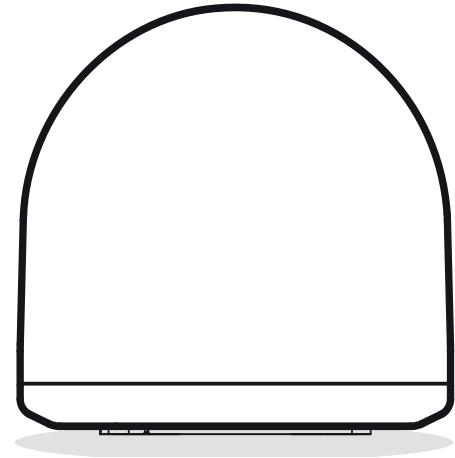


Figure 02 : Radome

### Antenna Control Unit (ACU)

The Antenna Control Unit (ACU) provides the power to the antenna and controls various settings of the antenna. The digital VFD (Vacuum Fluorescent Display) allows for easy operation of the ACU, even in the dark.

The functions of the ACU are as follows:

- Provides power to the antenna unit
- Monitors the antenna status
- Changes the target satellite
- Set up the user environment
- Set the current GPS information
- Set satellite information
- Perform self-diagnosis of the antenna
- Set up the interface with a PC

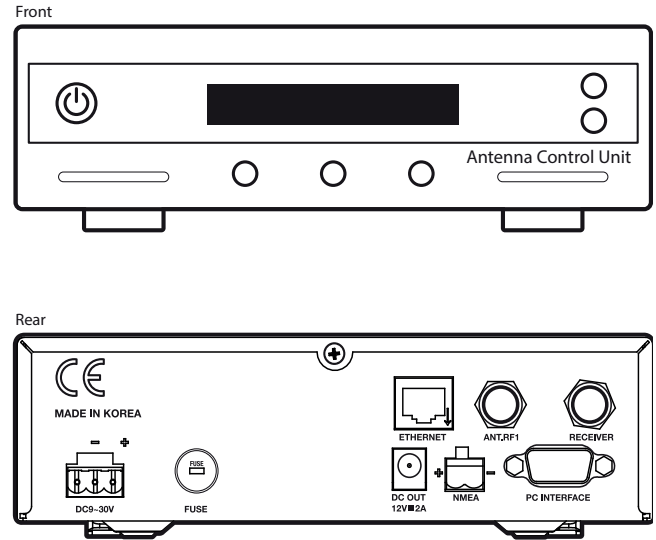




 



Figure 03 : Front & Rear of ACU

## Raymarine Satellite TV Antenna Systems

### Installation Kit

Contains the items required for securing the antenna unit and ACU to the vessel.

Antenna				
Item				
	Hex.Bolt	Flat Washer	Spring Washer	Hex. Nut
Qty	5	5	5	5
ACU				
Item				
	Self-Tapping Screw	Machine Screw		
Qty	5	5		
Size	(M4 X 16L)	(M3 X 8L)		

**Figure 04 : Installation Bolt Kit**

### Other Components


No	Components	Size	Qty
1	ACU Bracket	-	2
2	RG6(Antenna – ACU RF Cable)	15m	1
3	RG6(ACU – IRD Cable)	3m	1
4	Power Cable	10m	1
5	PC Serial Cable	1.8m	1
6	NMEA Connector	1.5m	1
7	Power Connector	AK950-2	1
		M6x35L	5
	Hex Bolt	M6x50L	5
		ø4x16L	5
8	Tapping Screw	ø3x8L	5
	Flat Washer	M6	10
	Spring Washer	M6	5
	Nut	M6	5
9	Aptus CD	-	1
10	User Manual	-	1
11	Mounting Template		1
12	Quick Installation Guide	-	1

**Figure 05 : List of the Supplied Parts**




---

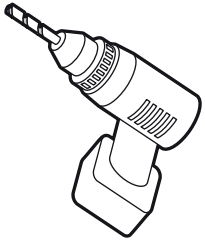
## Tools Required for Installation




Power Drill

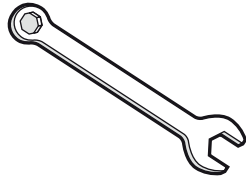


11 mm Spanner

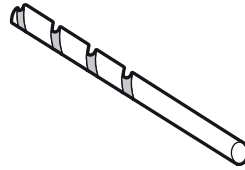


8 mm Drill Bit

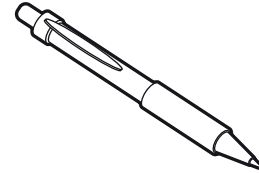


Pencil

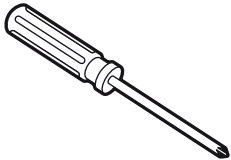

Cross-Head  
Screwdriver

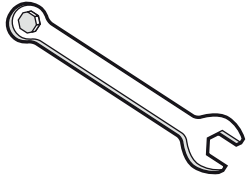

10 mm Spanner

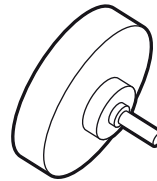

Ø50 mm  
Hole Saw

**Figure 06 : Required Tools for Installation**

### Planning the Installation


#### Selection of Installation Site

The antenna should be installed in a place where it has an all-round clear view of the horizon. Ensure there are no obstacles within 15 degrees above the antenna. Any obstacles can prevent the antenna from tracking the satellite's signal (Refer to the drawing on the right).

Do not install the antenna nearby the radar, especially if they're on the same plane, as their energy levels may overload the antenna's front-end circuits. It is recommended to position the antenna at least 4 feet (1.2m) above or below the level of the radar and a minimum of 15 feet (4.6m) away from any high power short wave radars.

The mounting platform should be suitably rigid, and not subjected to excessive vibration. The movement of the antenna can be minimized by installing it at the center of the vessel. For optimal performance of the antenna, it is not recommended to install it at any corner of the vessel, where the movement of the vessel is the greatest. Install the bottom of the antenna parallel to the surface of the sea and fix it tightly to the structure of the vessel.

When setting the antenna down, be careful not to damage the RF connector. Striking the connectors on the bottom directly will damage the connector.

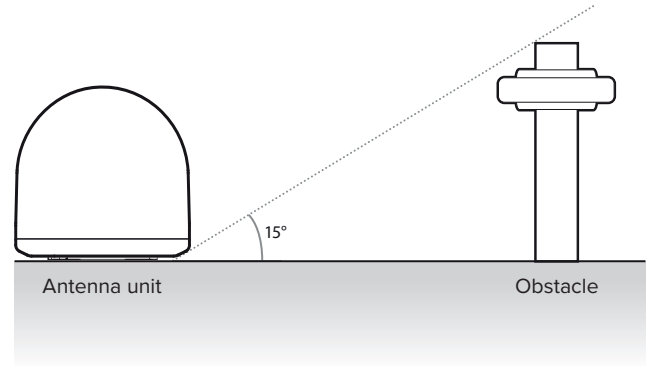

**Figure 07 : Elevation Limit of Obstacles**

---

## Cables

Before installing the system's cables, consider the following points.

- All cables need to be well clamped and protected from physical damage and exposure to heat and humidity.
- A cable with an acute bend is not allowed.
- Where a cable passes through an exposed bulkhead or deckhead, a watertight gland or swan neck tube should be used.

## Power Requirements

To avoid potential damage to your system, adhere to the following power requirements:

- Raymarine STV33 has been designed to work on a boat's power supply rated at 12V / 24V DC (acceptable range: 9~30 V DC).
- If your IRD(s) and television(s) require a 110V/240V AC power supply, you will need to install a suitable DC to AC converter to operate the unit(s) from your boat's DC power supply.

## Extending the cables

The cables that have been supplied with your Raymarine system should be of adequate length to complete the installation on most boats.

## Power Cable

This cable is supplied at a length of 10m.

## RF Cable

This cable is supplied at a length of 15m. If a longer length is required you should replace this cable with an extended RF cable, available separately.

---

**Note:** Exceeding the indicated cable lengths will result in reduced performance of your system.

---

### Installation and Mounting of the Antenna

The method of installation and mounting of the antenna may vary due to vessel design but the following procedures are applicable in most situations, and will result in a secure and effective installation.


#### Confirmation of Size and Installation of Power Tower

- Confirm the height and diameter of the bottom surface of the antenna before installing it.
- The space must be sufficient for installing the antenna unit, considering the height and diameter of the antenna.
- The height and the diameter of the bottom surface of the antenna is shown in the following drawing. If possible, install the antenna using a “power tower”, available separately.

---

**Note:** Before installing the antenna, open the radome and remove the shipping constraints from the antenna interior. Reinstall the radome before operating the system. The system will not perform properly if the radome is open.

---

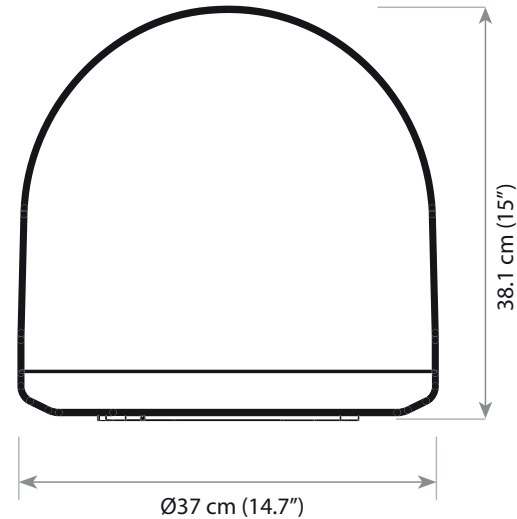


**Figure 08 : Radome Dimension of STV33**

---

### Mark the Antenna's Parking Position

Referring to the supplied Mounting template, mark where antenna is to be mounted onboard the ship (it must be a flat surface), or on a separate "power tower" by drawing a square of 14.4cm (5.7")

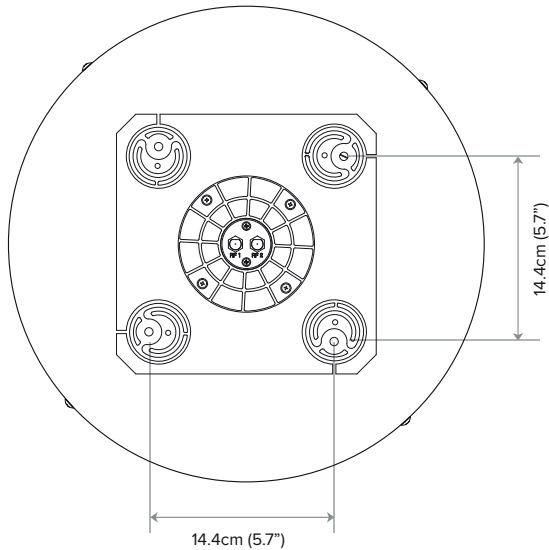

**Figure 09 : Raymarine STV33**

---

**Note:** If a "power tower" is not used to mount the antenna, separate cable shocks and waterproofing measures must be taken to protect the RF connector from being exposed to sea water and external shocks. An exposed cable may cause electric shock and cause serious damage to the equipment.

---

### Securing Holes for Bolts and Cable Ways

Make 4 bolt holes of 8mm diameter, one at each corner of a rectangle drawn as below, and make a circular hole of 50mm diameter at the center of the rectangle through which the cable will run.

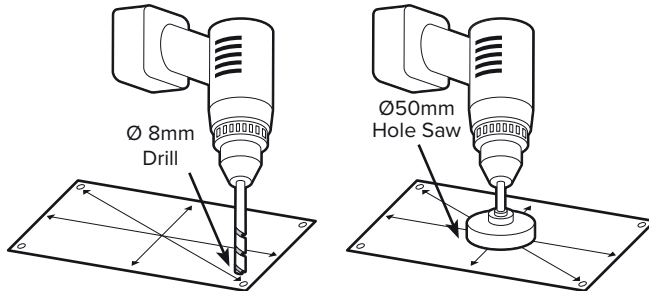


Figure 10 : Drilling Instruction

### Connection of the Cable

Remove the rubber cap from the RF connector. Connect the RF cable to the RF connector under the base plate through the access hole using an 11mm spanner. Be careful not to over tighten, as you may damage the connector.

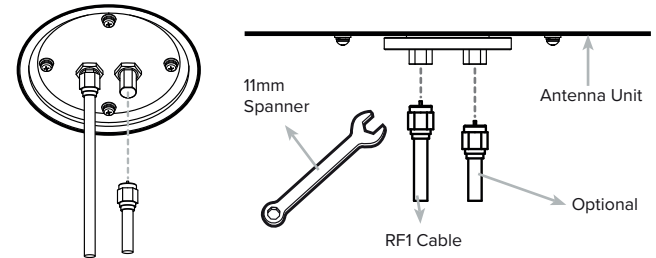


Figure 11 : Connectors on Bottom of Antenna

**Note:** Do not use excessive force or overtighten when using the spanner, as this will damage the threads. Be careful that the connectors do not touch the mounting surface of the antenna, this might cause a critical malfunction and serious damage to the equipment.

### Mounting the Antenna

Fix the antenna to the holes made before, as shown in the drawing below by using the supplied hex head bolts (M6 X 35L), M6 spring washer, M6 flat washer and M6 Nut.

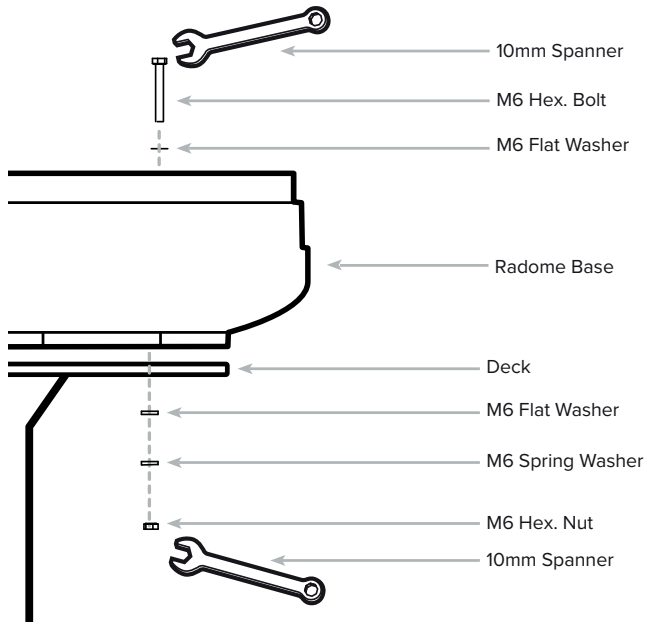


Figure 12 : Mounting the Antenna

## Installing the ACU

### ACU Dimensions

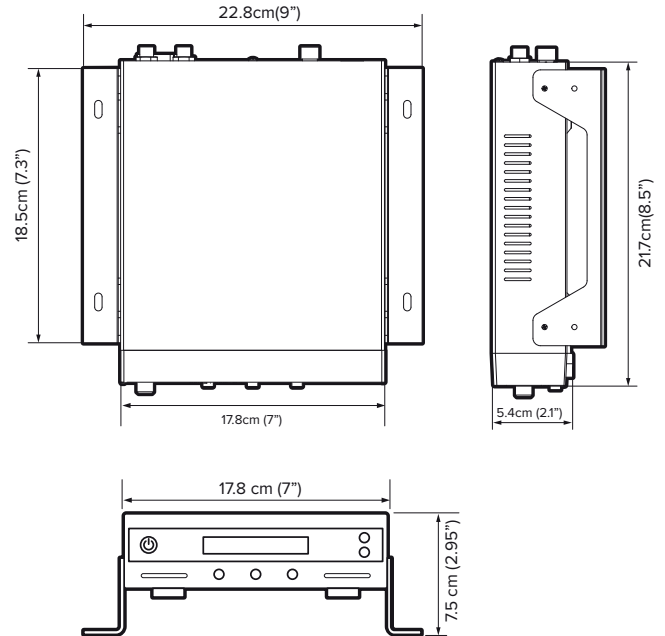


Figure 13 : Dimension of ACU

### Selecting ACU Installation Site

The ACU should be installed below deck, in a location that is:

- Dry, cool, and ventilated.
- Easily accessible from your main TV viewing area.

### To Install the ACU

1. The ACU should be installed using the two supplied mounting brackets which allow for a top or bottom mounting configuration.
2. Using the self tapping screws supplied, attach the mounting brackets to the sides of the ACU.
3. Place the ACU in the location where it is going to be installed.
4. Connect the cables to the rear of the ACU.
5. Use a pencil to mark the 4 hole positions (two on each side), and use the appropriate drill bit to drill them.

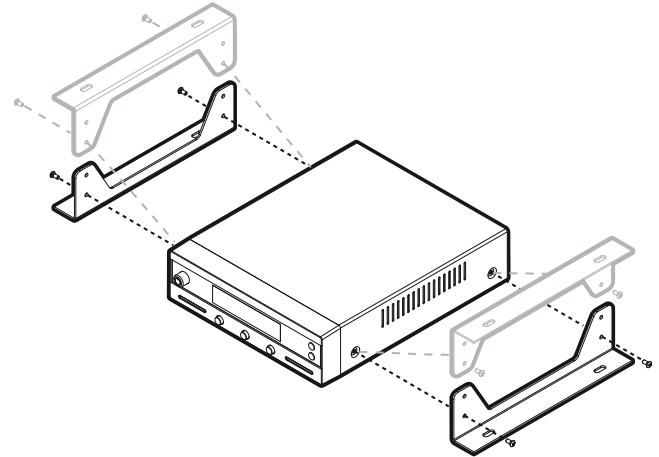


Figure 14 : Installation of ACU



## Connecting the System Cables

After installation and fixation of the antenna, connect the ACU to the antenna. Refer to the drawing below to connect cables.

### Single IRD Connection

- Connect the RF Cable (15m) from the RF 1 connector on the antenna to the ANT. RF1 connector on the rear of ACU.
- Connect the ACU-IRD Cable (3m) from the RECEIVER connector on the rear of the ACU to the RF on the IRD.
- Connect the power cable (10m) from the DC power connector on the rear of ACU to a power source at 12V /24V DC.
- Press the POWER ON switch in front of the ACU to start operating the antenna system automatically.

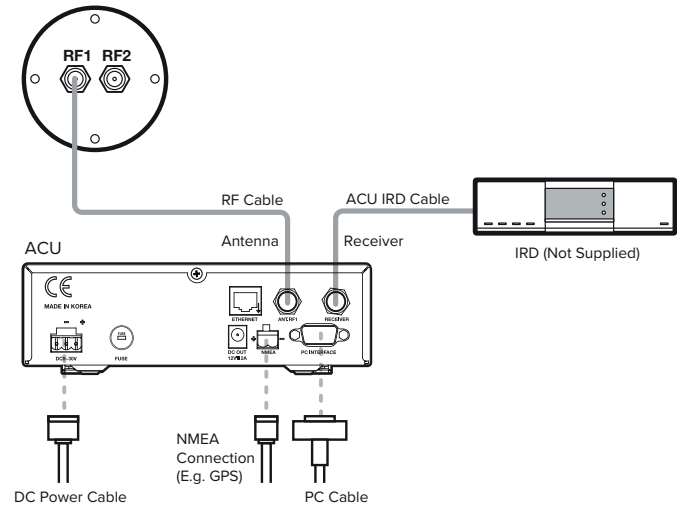


Figure 15 : Single IRD Configuration

### Twin IRDs Connection

You can connect two IRDs for your antenna as shown in the following diagram. One of the IRD's need to be set up with the ACU in order to use another IRD without connecting the ACU. Both IRD's with and without an ACU connection can receive any channels that are available from the tracked satellite.

As in the single IRD option, the RF cables from the antenna base plate should be connected to 'LNB', 'ANT', or 'Satellite In' on the rear panel of the IRD.


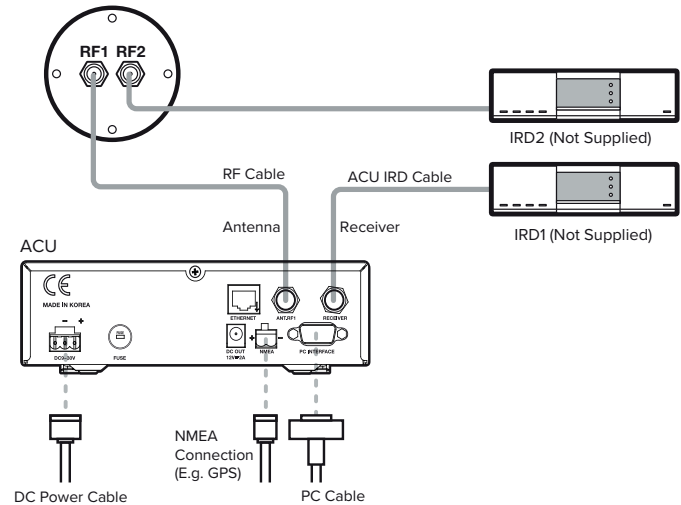


Figure 16 : Dual-IRDS Configuration

### Multiple-IRDs Connection

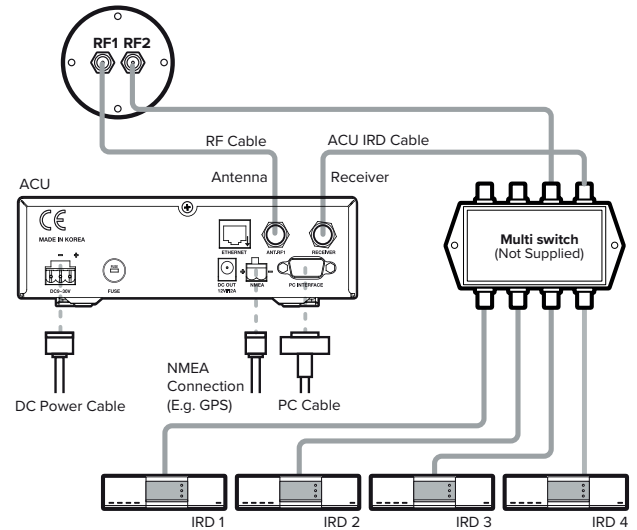In order to connect multi-IRD to the antenna, you will need to purchase a suitable multiswitch. The multiswitch has to be installed between the antenna unit and the IRDs as shown on the right.

**Note:** The system can receive either “High Band” or “Low Band” channels by using a multi-switch to connect more than two receivers.



\* IRD 1~4 : Not supplied

Figure 17 : Multi-IRDs Configuration

### Connecting the System to a GPS

To improve satellite tracking, you can connect your satellite TV system directly to your boat's NMEA 0183 GPS system. To do this you will need a cable with suitable lengths to connect to your GPS system and you will need the green 2-way ACU GPS connector supplied with your Raymarine STV33 Satellite TV System.

#### To connect the system to a GPS

1. Remove the rubber band insulations on each cable and connect a cable to each terminal of the 2-way connector.
2. Tighten the locking screws.
3. Connect the cable from the **+ve** (positive) terminal of the ACU's GPS connector to the NMEA **OUT** wire of the boat's GPS system.
4. Connect the cable from the **-ve** (negative) terminal of the ACU GPS connector to the **ground wire** of the boat's GPS system.
5. Refit the ACU GPS connector to the rear of the ACU.


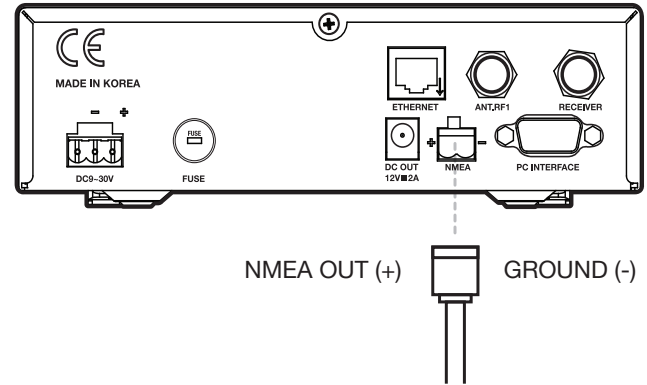


Figure 18 : NMEA 0183 GPS Connection

---

## DC OUT port

The ACU provides DC OUT port for direct connection of an MIM (Multi-satellite Interface Multi-switch), which requires DC power input. The MIM can be connected to the ACU without AC-DC Adaptor.

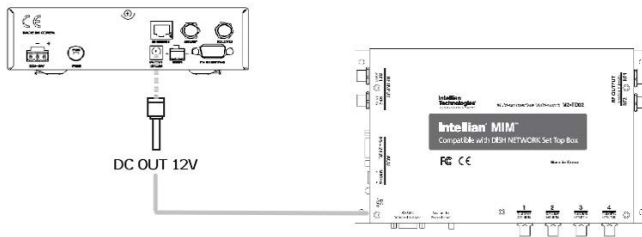

**Figure 19 : DC out MIM**

---

**Note:** The DC power cable is included in the component list of MIM.

**Note:** The STV33 antenna system is not compatible with SDM devices.

---

### Adjusting the LNB Skew Angle (Linear Polarization Only)

#### LNB Skew Angle

The LNB skew angle only needs to be adjusted when the target satellite is linear polarized. In order to receive the maximum satellite signal level, the LNB skew angle must be adjusted according to the calculation of current GPS location and target satellite.

It only needs to be adjusted when changing from one satellite to another, or when the vessel has traveled a significant geographic distance. It should NOT need to be readjusted if the vessel stays in the same location and is operating on the same satellite.

#### Skew Angle Adjustment for STV33

Polarization of your Raymarine STV33 antenna must be accomplished manually by the following steps.

- Remove the upper part of the Radome after switching the power OFF.
- Loosen the 3 screws that connect the LNB to the feed horn.
- Turn the LNB to place it to the angle indicated on the back of the feed horn.
- Tighten the 3 screws.

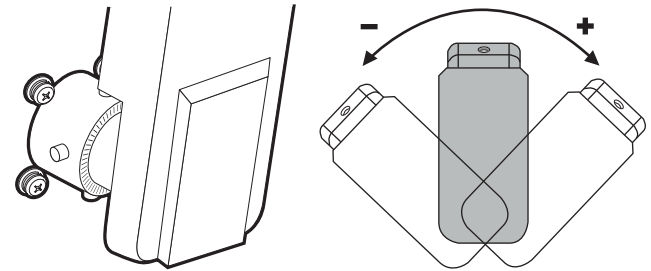


Figure 21 : Manual Angle Adjustment LNB Skew

## PC to ACU Communication Setup

You can establish data communication between a PC and the ACU using one of the following methods.

### Serial Connection Connection through Serial Port

1. Connect a 9-pin Serial cable from the PC INTERFACE connector on the ACU to the 9-pin serial port on your PC.
2. If there is not a 9-pin serial port on the PC, use a USB-Serial adapter.

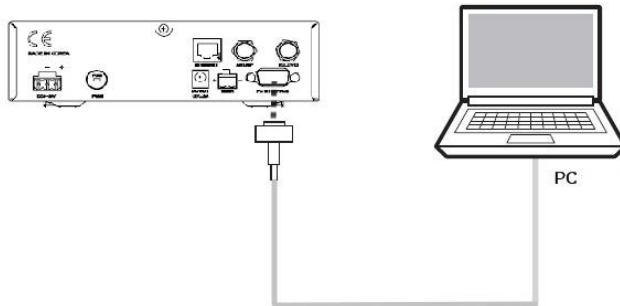


Figure 22 : Serial Connection

## Wi-Fi Connection

### Setup Wi-Fi Connection

- Setting up the PC in order to access Wi-Fi
  1. Connect Wi-Fi.  
After clicking on the Windows Wireless Connection icon, click on i-AP(default).
  2. By default, the connection security is opened.
  3. Use the ACU's IP address to access Aptus®
    - Default: 192.168.1.223



Figure 23 : ACU to PC Wifi Connection

### TCP/IP Connection

#### Connection through Rear Panel Ethernet Port

This method requires separate IP configuration on a PC.

1. Connect an Ethernet cable from a PC Ethernet port to Ethernet port on the back of the ACU.
2. Go to Control Panel > Network and Sharing Center > Change Adapter Settings and right-click on the Local Area Connection, then click Properties.
3. Select TCP/IPv4, then click Properties.
4. Change the network settings on a PC;
  - IP Address: 192.168. 0.222
  - Subnet Mask: 255.255.255.0
  - Gateway: 192.168.0.223
5. Use the ACU's IP address to access Aptus® .
  - Default: 192.168.0.223

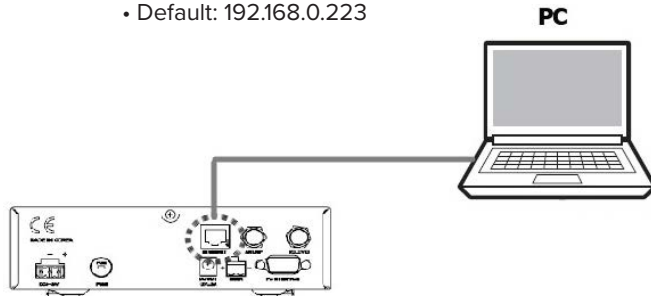


Figure 24 : ACU to PC TCP/IP Connection



---

# Operation Instruction

## Introduction

This section of the handbook describes how to setup your Satellite TV System after installing the ACU. It includes the following functions:

- System start up.
- Changing the default satellite.
- Monitoring the antenna status.
- Setting sleep mode.
- Entering setup mode.
- Setting the satellite pair.
- Editing satellite information.
- Setting the antenna parameter.
- Setting the LNB local frequency.
- Setting GPS.
- Setting the DiSEqC method.
- Display versions.
- Display power status.
- Setting antenna go position.
- Setting antenna move step.
- Setting remote control.
- Setting the factory default parameters.
- Performing diagnostic tests.

---

**Note:** Many of the above functions will only be required after initial installation of your system.

---

# Operation Using the ACU

## ACU Soft Keys

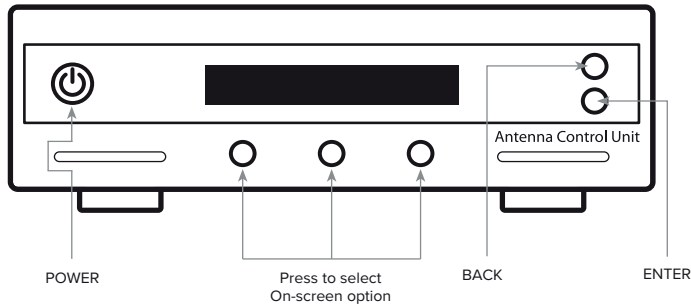


Figure 25 : ACU Soft Keys


## Normal Mode
 
### Start Up


With the system installed and power applied, the ACU screen will show the following sequence:




1. Data communication is being established between the antenna and the ACU. The ACU is initialized.



 2. The antenna is initialized.



 3. The antenna is searching for Satellite A.




4. The antenna has located the satellite and is now tracking.


### Changing Target Satellite

 Your antenna is programmed with two candidates for target satellites as the default Dual-sat mode. Use advanced Tri-sat mode for targeting three satellites. To change the target satellite, press the LEFT soft key. The target satellite is changed and is automatically tracked by the antenna.

#### Default Dual-Sat Mode




 1. Press LEFT soft key for tracking Satellite B.




2. The antenna is tracking Satellite B.


#### Advanced Tri-Sat Mode

 

 
1. Press LEFT soft key for tracking Satellite B.



 2. The antenna is tracking Satellite B.



 3. Press LEFT soft key for tracking Satellite C.




4. The antenna is tracking Satellite C.


## Raymarine Satellite TV Antenna Systems
 
### Monitoring the Current Status of the Antenna


While the power is ON on the Raymarine STV33, ACU displays the status of the antenna. The various ACU displays may be shown according to the current status of the antenna.



 
1. The antenna is searching Satellite A.



 
2. The antenna is tracking Satellite A.



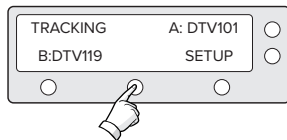
3. The antenna is winding/unwinding the cables in the antenna.



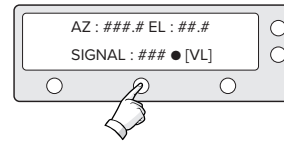4. The antenna is again tracking Satellite A. Press center soft key to display position detail.



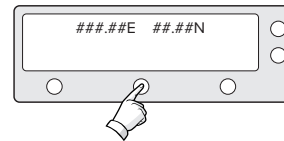
5. Antenna position detail and signal strength are displayed.




6. Press center soft key to display current GPS information.

## Sleep Mode

 If the antenna loses the tracking satellite while in sleep mode, sleep mode will be cancelled.



 1. Press BACK to enter sleep mode.




2. Press BACK again for exiting sleep mode.


## Setup Mode
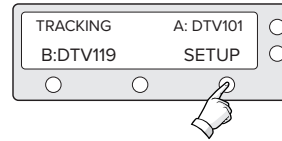
### Begin Setup Mode


To enter the Setup Mode simply follow the instructions below.



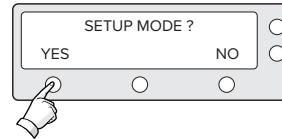1. With the antenna tracking, press SETUP.



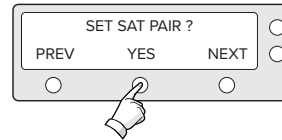
2. Press YES to enter setup mode.




3. Press YES to set the satellite pair.

## Setting the Satellite Pair

 
You can change the satellite pair if you decide to receive satellite television service from a different service provider.



 
1. Press YES to enter setup mode.



 
2. Press YES to set satellite pair.



 
3. Press YES to set triple satellites.



 4. Set satellite A  
Press PREV to show previous satellite name.  
Press SELECT to set chosen satellite to SAT A.  
Press NEXT to show next satellite name.



 5. Set satellite B  
Press PREV to show previous satellite name.  
Press SELECT to set chosen satellite to SAT B.  
Press NEXT to show next satellite.




6. Set satellite C  
Press PREV to show previous satellite name.  
Press SELECT to set chosen satellite to SAT C.  
Press NEXT to show next satellite name.




7. Press YES to save selections.  
Press NO to cancel and return to main setup mode.

## Setting GPS

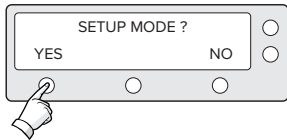
It is possible to set up and modify the GPS information, which enhances the antenna functionality.



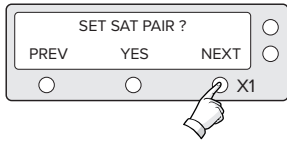
1. Press YES to enter setup mode.



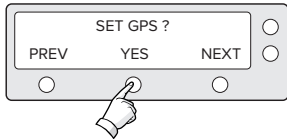
2. Press NEXT to enter GPS setup mode.



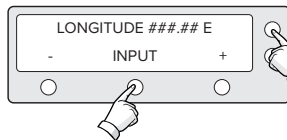
3. Press YES to set GPS.



 4. Input the longitude data.  
+ increases the value. - decreases the value.  
Change the underscored digit using the +/- buttons.  
Press INPUT to accept the value and move to next digit. Press BACK to move to previous digit.



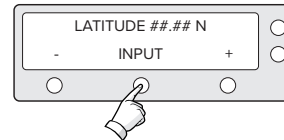5. Press ENTER to move to next screen. Press BACK to move to previous screen.




6. Input the latitude data.  
+ increases the value. - decreases the value.  
Change the underscored digit using the +/- buttons.  
Press INPUT to accept the value and move to next digit.  
Press BACK to move to previous digit.




7. Press YES to accept data.  
Press NO to cancel and return to main setup mode.

## Edit Satellite Information

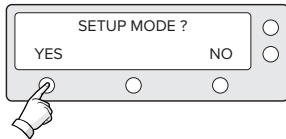
It is possible to modify the existing satellite information and input new satellite information into the ACU as well. It is not recommended for a novice satellite service user to use this mode.



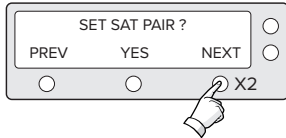
1. Press YES to enter setup mode.



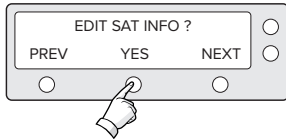
2. Press NEXT twice to enter edit satellite info mode.



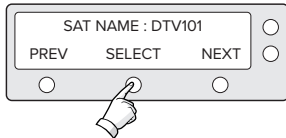
3. Press YES to edit satellite info.



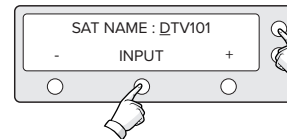
4. Set the satellite name.  
PREV - Shows previous satellite name.  
SELECT - Select the displayed satellite for editing.  
NEXT - Shows next satellite name.  
Press ENTER to move to next screen.



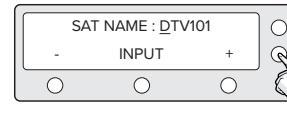
5. Input the satellite name.  
+ increases the value. - decreases the value.  
Change the underscored digit using the +/- buttons.  
Press INPUT to accept the value and move to next digit.  
Press BACK to move to previous digit.



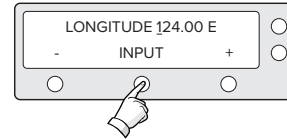6. Press ENTER to move to next screen.  
Press BACK to return previous screen.




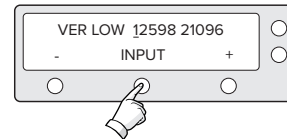7. Input the satellite position.  
+ increases the value. - decreases the value.  
Change the underscored digit using the +/- buttons.  
Press INPUT to accept the value and move to next digit.  
Press BACK to move to previous digit.




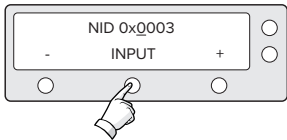8. Input the tracking frequency (MHz) and symbol rate (KHz) for vertical low band.






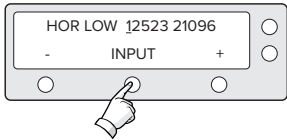
9. Input the network ID (NID) for vertical low band.



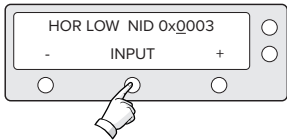
10. Input the tracking frequency (MHz) and symbol rate (KHz) for horizontal low band.



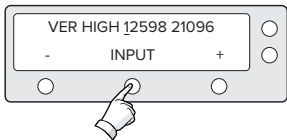
11. Input the network ID (NID) for horizontal low band.



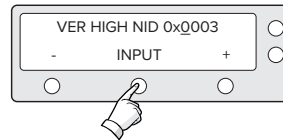
12. Input the tracking frequency (MHz) and symbol rate (KHz) for vertical high band.



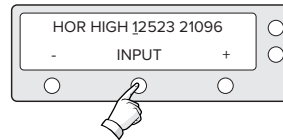
13. Input the network ID (NID) for vertical high band.



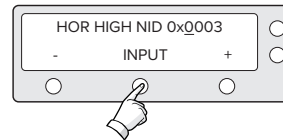
14. Input the tracking frequency (MHz) and symbol rate (KHz) for horizontal high band.



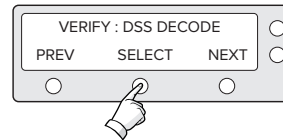
15. Input the network ID (NID) for horizontal high band.



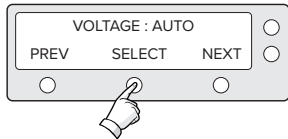16. Select the **Verification Method\*** of tracking satellite.  
PREV - Shows previous method.  
SELECT - Set the displayed method.  
NEXT - Shows next method.



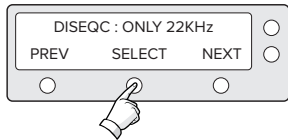17. Select the **Voltage Supply Method\*** to LNB. (AUTO is recommended)



18. Select the **DISEQC Method\***. (AUTO is recommended)



19. Press YES to save the input information. Press NO to cancel and return to main setup mode.

### Verification Method\*

SIGNAL - use only signal level for tracking  
DVB LOCK - use only DVB Lock signal for tracking  
DVB DECODE - verify satellite using DVB decoding method for tracking  
DSS DECODE - decode only DSS Lock signal for tracking  
AGC AFTER DECODE - for tracking Ka-Band satellite

### Voltage Supply Method\*

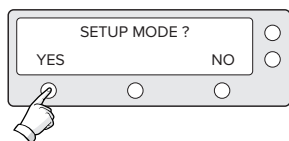
AUTO – Supply 13V or 18V to LNB  
ONLY 13 V - always supply 13 V to LNB  
ONLY 18 V - always supply 18 V to LNB

### DISEQC Method\*


AUTO – Supply 0KHz tone or 22KHz tone to LNB  
ONLY 0 KHz – always supply 0KHz tone to LNB  
ONLY 22 KHz – always supply 22KHz tone to LNB

## Setting the Antenna Parameters


It is not recommended for a novice satellite service user to use this mode. Consult Raymarine for changing antenna parameters.



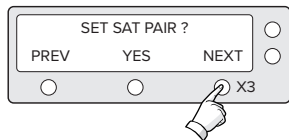
1. Press YES to enter setup mode.



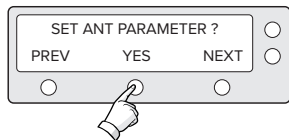
2. Press NEXT three times to enter set antenna parameter mode.



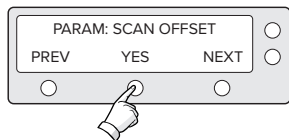3. Press YES to set antenna parameter.



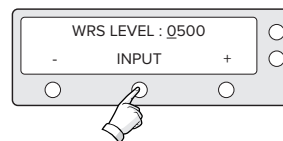4. Select the **PARAM\***.  
PREV - Shows previous parameter.  
SELECT - Set the displayed parameter.  
NEXT - Shows next parameter.  
Press ENTER to move to next screen.



5. Input the WRS LEVEL.  
+ increases the value. - decreases the value.  
Change the underscored digit using the +/- buttons.  
Press INPUT to accept the value and move to next digit.  
Press BACK to move to previous digit.  
Press ENTER to move to next screen.



6. Press YES to set up another parameter.  
Press NO to cancel and return to main setup mode.



7. Press YES to save the input information.  
Press NO to cancel and return to main setup mode.

## Raymarine Satellite TV Antenna Systems

---

### PARAM\*

**Scan Offset** The scan offset is to offset the angle difference between the black marker on the sub-reflector and the optical sensor.

**Track Scale** The track scale is to control the tracking speed while antenna is tracking the satellite.

**Detect Level** The detect level is to set the satellite signal detection level.

**WRS Level** The WRS level is to set the WRS detection level.

**Track Offset** The tracking offset is to offset the satellite signal tracking level.

**Power Level** The power level is to distinguish the voltage between 13 V and 18 V.

**DiSEqC Level** The DiSEqC level is to distinguish 0KHz tone and 22KHz tone.

**Offset RH-LH** The offset RH-LH is to offset the signal difference between RHCP and LHCP.

**EL Offset** The EL offset is to offset the angle difference between the mechanical elevation angle and actual elevation angle.

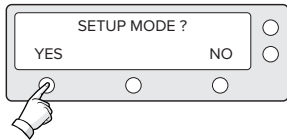
**Use WRS** Use WRS is to determine whether the system uses WRS level or not. "Use WRS" and "WRS Level" are pair functions.

**Offset Difference** Offset difference is to determine whether the system to uses "Offset RH-LH" or not. "Offset Difference" and "Offset RH-LH" are pair functions.


## Setting the LNB Local Frequency

It is possible to select a local frequency from ACU. This mode is not recommended for novice satellite service users.

### Case1. Single band LNB is used.



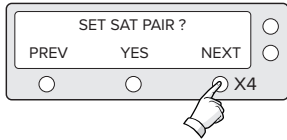
1. Press YES to enter setup mode.




2. Press NEXT four times to enter set local frequency mode.



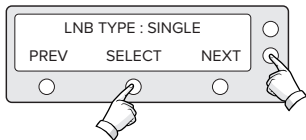3. Press YES to set local frequency.



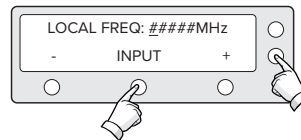4. Select the **LNB Type\*** - SINGLE.  
PREV - Shows previous LNB type.  
SELECT - Set the displayed LNB type.  
NEXT - Shows next LNB type.  
Press ENTER to move to next screen.




5. Input the local frequency of LNB.  
+ increases the value. - decreases the value.  
Change the underscored digit using the +/-buttons.  
Press INPUT to accept the value and move to next digit.  
Press BACK to move to previous digit.  
Press ENTER to move to next screen.




6. Press YES to accept the data.  
Press NO to cancel and return to main setup mode.


### Case 2. Universal LNB is used (Low band local frequency 9750 MHz / High band local frequency 10600 MHz).

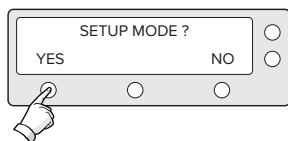

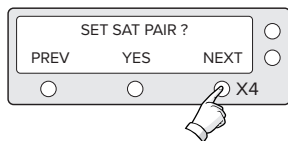
1. Press YES to enter setup mode.



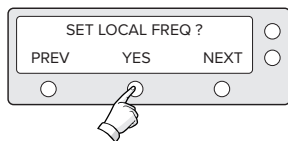2. Press NEXT four times to enter set local frequency mode.



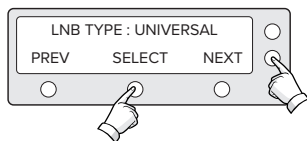3. Press YES to set local frequency.



4. Select the **LNB Type\*** - UNIVERSAL.  
PREV - Shows previous LNB type.  
SELECT - Set the displayed LNB type.  
NEXT - Shows next LNB type.  
Press ENTER to move to next screen.



5. Press YES to accept the data.  
Press NO to cancel and return to main setup mode.

#### LNB Type\*

SINGLE: Single Band LNB

Asia 11300 MHz, Japan 10678 MHz, Korea 10750 MHz,  
America 11250 MHz

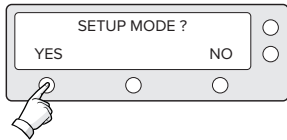
UNIVERSAL : Universal LNB

Low band local frequency - 9750 MHz


High band local frequency - 10600 MHz

## Setting the DiSEqC Method


DiSEqC selection can be made from ACU. It is not recommended for a novice satellite service user this mode.



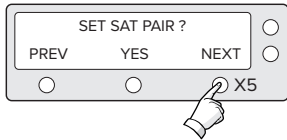
1. Press YES to enter setup mode.



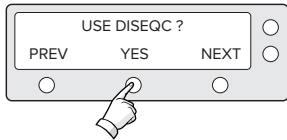2. Press NEXT five times to enter DiSEqC mode.



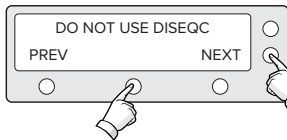3. Press YES to use DiSEqC.



4. Select the **DiSEqC Method\***  
PREV - Shows previous DiSEqC Method.  
SELECT/ENTER - Set the displayed DiSEqC method.  
NEXT - Shows next DiSEqC Method.  
Press ENTER to move to next screen.



5. Press YES to accept the selection.  
Press NO to cancel and return to main setup mode.

### DiSEqC Method\*

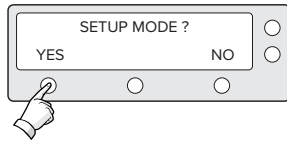
DO NOT USE DISEQC - DiSEqC is not being used.

USE TO CHANGE BAND - DiSEqC is being used to change to low and high band.


USE TO CHANGE SAT - DiSEqC is being used to change tracking satellite.

## Setting the Use of DiSEqC 1.2


If DiSEqC 1.2 protocol is in use on your IRD, enable the DiSEqC 1.2 setting on the ACU to process the DiSEqC 1.2 command.



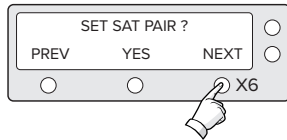
1. Press YES to enter setup mode.



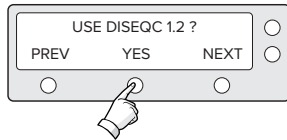2. Press NEXT six times to enter the Use DiSEqC 1.2 menu.



 3. Press YES to set the use of DiSEqC 1.2.



4. Set the USE DiSEqC 1.2 to a desired option\*.  
PREV - Shows previous option (YES/NO)  
SELECT/ENTER - Set the displayed option for DiSEqC 1.2.  
NEXT - Shows next option (YES/NO)  
Press ENTER to move to next screen.



5. Press YES to accept the data.  
Press NO to cancel and return to main setup mode.


### Options for 'USE DiSEqC 1.2'

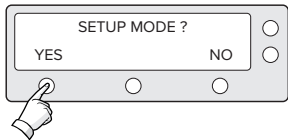YES - Select this option if the DiSEqC 1.2 is used.  
NO - Select this option if the DiSEqC 1.2 is not used.




## Display Versions


This sequence enables you to see what version of antenna and ACU software are installed on your system.



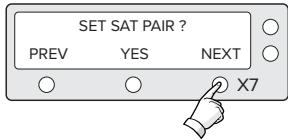
1. Press YES to enter Setup Mode.



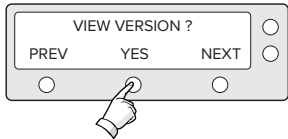
2. Press NEXT seven times to enter view version mode.



 
3. Press YES to view version.



 
4. Antenna product name and S/N are shown.  
Press EXIT to return to main setup mode.



 5. Antenna software version and S/N are shown.  
Press EXIT to return to main setup mode.




 6. ACU software version and S/N are shown.  
Press EXIT to return to main setup mode.




7. Library version and S/N are shown.  
Press EXIT to return to main setup mode.


## Display Power

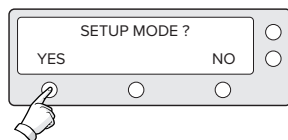

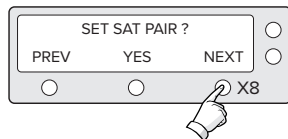
1. Press YES to enter setup mode.



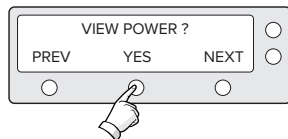
2. Press NEXT eight times to enter view power mode.



 
3. Press YES to view power.



 4. ACU input voltage is shown.  
ACU output voltage is shown.  
Press any key to return to main setup mode.




 5. Antenna input voltage is shown.  
Press center soft key to view IRD Voltage and frequency.  
Press EXIT to return to main setup mode.




6. IRD voltage and frequency are shown.  
Press EXIT to return to main setup mode.


## Setting Remote Control

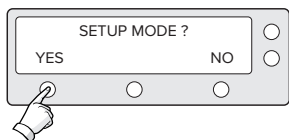

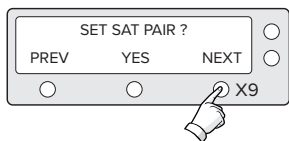
1. Press YES to enter setup mode.



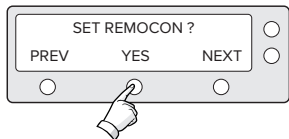
2. Press NEXT nine times to enter remote control setting mode .



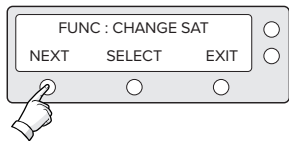
3. Press YES to set remote control.



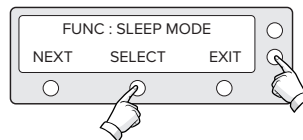4. Select the **Function\***  
NEXT - Shows next function.



 
5. SELECT/ENTER - Registers a key on remote control.



6. Point remote control to ACU.  
Press any key on remote control for selected function and press the same key again for confirmation. Press BACK to move to previous screen.  
Press EXIT to return to main setup mode.



 7. If failed to press the same key twice, TRY AGAIN will be displayed.




8. If failed to register a free key, KEY IS USING will be displayed.

## Raymarine Satellite TV Antenna Systems

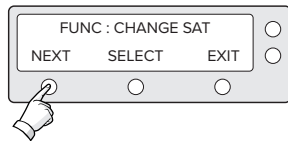---



9. REMOTE KEY REGISTERED will be displayed if key has been properly registered.



10. Press NEXT to shows next function.  
Press EXIT to return to main setup mode.

### Function\*

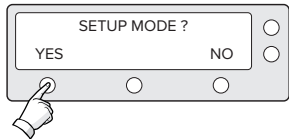
CHANGE SAT - Change the target satellite.

SLEEP MODE - Enter sleep mode.


CLEAR REGISTERED KEY - Clear registered key.

## Setting Antenna Go Position


The antenna can be controlled manually by using the ACU.



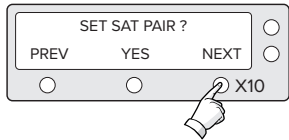
1. Press YES to enter setup mode.



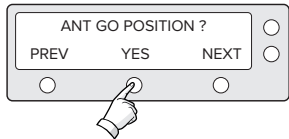
2. Press NEXT ten times to enter antenna go position mode.



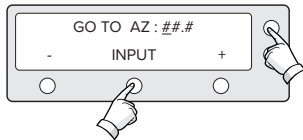
3. Press YES to go position.



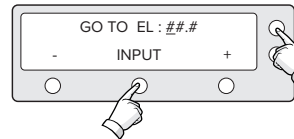
4. Input position value for azimuth (AZ) axis.  
+ increases the value. - decreases the value.  
Change the underscored digit using the +/- buttons.  
Press INPUT to accept the value and move to next digit.  
Press BACK to move to previous digit.  
Press ENTER to move to next screen.



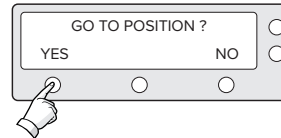5. Input position value for elevation (EL) axis.  
+ increases the value. - decreases the value.  
Change the underscored digit using the +/- buttons.  
Press INPUT to accept the value and move to next digit.  
Press BACK to move to previous digit.  
Press ENTER to move to next screen.



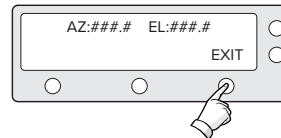6. Press YES to move the antenna to input position.  
Press NO to return to the Antenna Go Position mode.




7. Press EXIT to return to main setup mode.


# Raymarine Satellite TV Antenna Systems
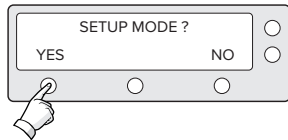
## Setting the Antenna Move Step


The antenna can be moved by 1° step manually by using ACU.



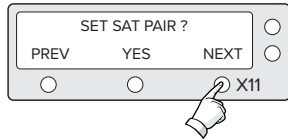
1. Press YES to enter setup mode.



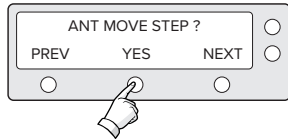
2. Press NEXT eleven times to enter antenna move step mode.



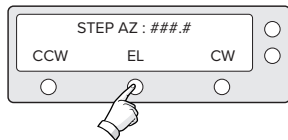3. Press YES to move step.



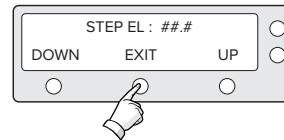
4. Move the antenna in the AZ axis.  
CW - Move the antenna clockwise.  
CCW - Move the antenna counter clockwise.  
EL - Go to elevation control screen.




5. Move the antenna in the EL axis.  
UP - Move the antenna up.  
DOWN - Move the antenna down.  
EXIT - Return to antenna move step mode.

## Executing Antenna Diagnosis

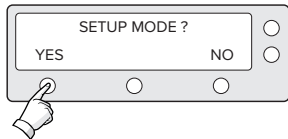
It is possible to see the antenna's status by reviewing the results of diagnosis of the antenna. Refer to the following codes to understand the diagnosis results.



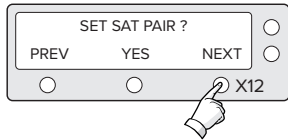
1. Press YES to enter setup mode.



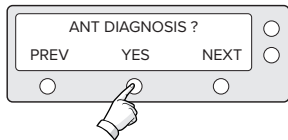
2. Press NEXT twelve times to enter antenna diagnosis mode.



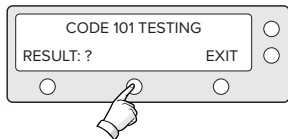3. Press YES to diagnose the antenna.



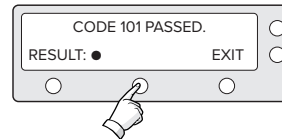4. CODE 101 is being tested.  
Press EXIT to return to main setup mode.



5. **CODE\*** 101 has passed.  
Press EXIT to return to main setup mode.

## Raymarine Satellite TV Antenna Systems

---

### CODE\*

**CODE 101** Data communication between antenna and antenna control unit is tested. If failed, check the RF cable.

**CODE 102** AZ CW limit is tested.  
If failed, check the limit sensors, motor and belt for AZ axis.

**CODE 103** AZ CCW limit is tested.  
If failed, check the limit sensors, motor and belt for AZ axis.

**CODE 104** EL axis is tested.  
If failed, check the limit sensors, motor and belt for EL axis.

**CODE 105** Sub reflector is tested.  
If failed, check the sub reflector.

**CODE 106** LNB is tested.  
If failed, check the LNB and control board.

**CODE 107** Skew System is tested.  
if failed, check the control board, skew motor, and skew sensor.

**CODE 108** Antenna Input Power is tested.  
If failed, check the RF cable.

**CODE 109** ACU Power is tested.  
If failed, check the ACU power cable and Input DC power.

**CODE 110** IRD Power is tested.  
If failed, check the ACU to the IRD cable and IRD power.

**RESULT** • Test is passed.

**STATUS** - Test is skipped.

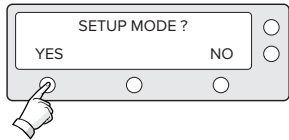
? Test is under process.

Number refers to an error code


(••3••• ••••) 3 means error code 103.




## Setting Region



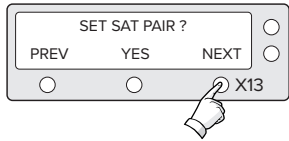
1. Press YES to enter setup mode.



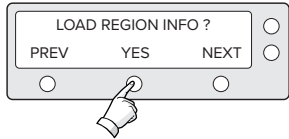
2. Press NEXT thirteen times to enter load region information mode.



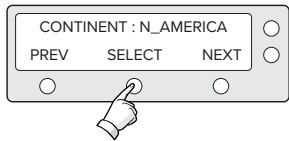
3. Press YES to load region information.



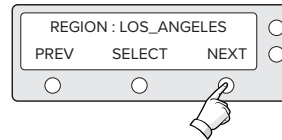4. Select the **Continent\***.  
PREV - Shows previous continent.  
SELECT - Set the displayed continent.  
NEXT - Shows next continent.



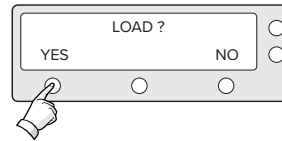5. Select the **Region\***.  
PREV - Shows previous region.  
SELECT - Set the displayed region.  
NEXT - Shows next region.



6. Press YES to load region information.  
Press NO to cancel and return to main setup mode.



7. After loading, auto restart.

**Continent\***  
N.AMERICA, S.AMERICA, EUROPE, ASIA.


**Region\***  
NEW YORK, MIAMI, UK, JAPAN, and etc.

## Raymarine Satellite TV Antenna Systems

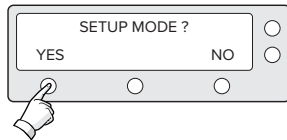
---

### Setting the Factory Default Parameters


Initialize all of the antenna's information to the factory's default setup.



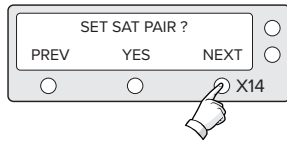1. Press YES to enter setup mode.



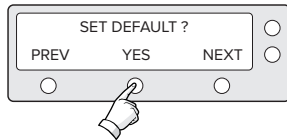2. Press NEXT fourteen times to enter default setting mode.



3. Press YES to set default parameters.

# ANTENNA CONTROL SOFTWARE

## Introduction to Aptus®

Aptus® is a next-generation graphical PC-based antenna remote control software. The Aptus® allows users to easily and conveniently set up the antenna by using a personal computer.

The minimum PC hardware and software requirements to install and run Aptus® are as below.


### Hardware

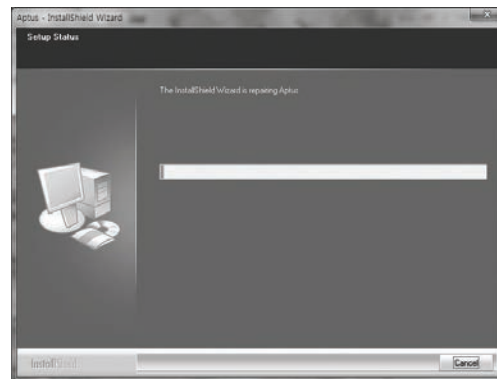
Hardware	Requirements
CPU	Intel® Pentium® 4 or higher
Memory	512MB or higher
Video Card	DirectX9.0 or higher supported
	H/W acceleration supported
	Video Memory 128MB or higher
HDD	1GB or higher

### Operating System and Software

Software	Requirements
Operating System	Windows XP (SP 2) or higher
Framework	Microsoft.Net Framework 3.5 Service Pack 1 or higher

## Software Installation

Double click the 'Aptus Setup.exe' icon  to install Aptus® directly onto your computer/ laptop. The InstallShield Wizard will guide you through the program setup process. The installation routine provides an icon on the desktop.




Click the icon to start the software. In addition, Raymarine also provides patch files for software upgrade.

### PC to ACU Communication Setup
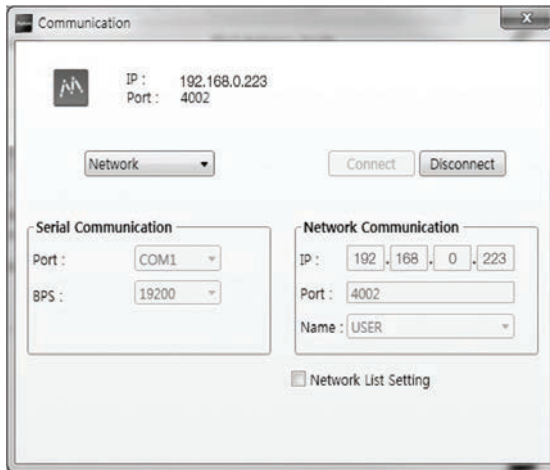
#### Starting Aptus®

Double-click the Aptus® desktop icon, then Communication Window appears to establish the data communication between your PC and the ACU. Select options of connection method to access your ACU either through the Serial Port Communication or the Network Communication (TCP/IP).



### Establish a data communication

#### Access ACU through Serial Communication

1. Connect a 9 pin Serial cable between the PC INTERFACE connector on the ACU and the 9 pin Serial port on the PC.
2. Select Serial at communication type combo-box.
3. The baud rate of the ACU is 19200 for STV33.
4. Select a COM port which is not occupied by other devices.
5. Click the Connect button.

#### Access ACU through Network Communication (TCP/IP)

1. Connect your PC to the Ethernet Port or via Wi-Fi.(Turn off the wireless connection while using the Ethernet port.)
2. Select Network at communication type combo-box.
3. Enter in the ACU's IP address (Factory default - Ethernet connection: 192.168.0.223 / Wi-Fi connection : 192.168.1.223)
4. Enter in the ACU's port number (Factory default : 4002)

---

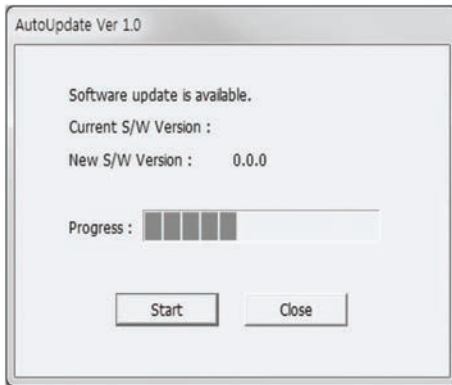
**Note:** If the remote access PC is located in the same network group with the ACU, the ACU can be accessed through the internal IP address. But, if the remote access PC is located outside of the network group, the ACU's IP address should be changed to the IP address assigned by the network service provider.

---

---

## Auto Update

Aptus<sup>®</sup> checks and notifies the latest version when it is started to maintain up to date software version by AutoUpdate function.




1. When Aptus<sup>®</sup> is started, it automatically checks the latest software version from the server and runs AutoUpdate if new version is available.
2. Current software version information is displayed.
3. It notifies new software version information.
4. When you click the “start” button, “File downloading...” message is displayed while downloading files from the server.



5. When file downloading is finished, “installing...” message is displayed and Aptus patch runs and the installation starts via InstallShield.
6. Click the “Finish” button when InstallShield installation is finished, then “Run the Aptus” message is displayed and Aptus runs and AutoUpdate is automatically finished.

### Toolbar Menus

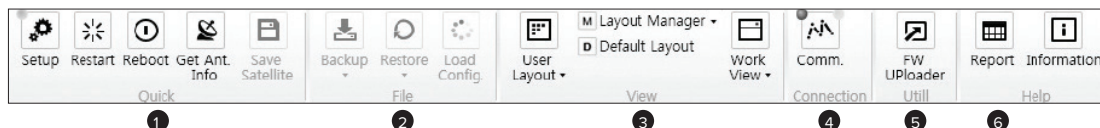The toolbar menus at the top of the screen display command buttons of the most commonly used functions of the Aptus®. The toolbar menu consists of 6 main menus; Quick (for quick launch of functions), File (not used on STV33), View (for user layout and work view), Connection (for communication), Util (not used on STV33) and Help (for reporting problems and information check).



#### ① Quick



**Setup:** enters Setup mode.



**Restart:** exits Setup mode and restarts the antenna.



**Reboot:** reboots the antenna.



**Get Ant. Info:** obtains the information stored in the antenna



 
**Save Satellite:** Not used on STV33.

② File : Not used on STV33.

③ View



- **User Layout:** displays the layout list that the user has previously stored by using Layout Manager. If you select a layout in this list, the selected layout will be constructed in Work View screen. The 'Basic layout' is provided by default.



- **Layout Manager:** provides the user with add, delete, and save functionalities in order to manage the user's layouts.

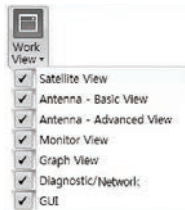
- Selecting 'Add current layout' opens a pop up window. Type in a desired name of current layout and click Add, then the new name of the current layout will be saved to the list under User Layout menu.

- When changes are made to the current layout, select 'Save current layout' option. The current layout will be saved with changes.

- To remove a layout, select 'Delete layout' option. Select a desired layout to remove on the pop up window, then click 'Delete'. Close the window by clicking on 'Close'. The selected layout is removed from the User Layout list.



- **Default Layout:** returns the current layout to the default layout.



- **Work View:** displays a list of seven pre-constructed Work View Tabs (Satellite View, Antenna Basic View, Antenna Advanced View, Monitor View, Graph View, ACU System View, and Antenna UI View) and also provides the Activate / Close functionalities for each view tab. Activate the work view tab by ticking the checkbox next to it.

## Raymarine Satellite TV Antenna Systems

---

### ④ Connection



At any time, data communication channel can be re-established between Serial and Network connection. Selecting Comm. Button will display Communication Window to connect to the ACU via Serial or Network communication.

### ⑤ Util : Not used on STV33.

### ⑥ Help



- **Report:** provides e-mail contact to the technical support team to let the user report problems at any time.



- **Information:** displays the information of current Aptus<sup>®</sup> software version.



## System Property Status Dashboard

The property status dashboard on the left pane of the screen provides the antenna status, the availability of TX transmission, signal level, GPS status, software information, product information and error status to be monitored quickly.

The dashboard consists of eight numbered sections:

- Antenna Status:** Setup (with a Setup button)
- Tracking Satellite:** KOREA3BS (selected), KOREA3CS. Buttons A and B.
- Signal Level:** 274 (with a progress bar)
- GPS:** 129.04 E 35.04 N
- Voltage:** Antenna: 23.0V, ACU: 24.5V
- Software Information:** Ant. Version: V4.67, ACU Version: V6.29
- Product Information:** System Model: I4, Ant. Name: B4-419J, Ant. Serial: S0413120912
- Diagnostic Error Report:** (checkbox)

① **Antenna Status:** Displays the status of the current mode of the antenna.

- Search: Antenna is searching the selected satellite.
- Tracking: Antenna is tracking the target satellite.
- Initialize: Antenna or ACU is initializing.
- Setup: Antenna is in SETUP mode.
- Sleep: Antenna is in Sleep mode.
- Unwrap: Antenna is unwinding/winding the cable in the antenna.

② **Tracking Satellite**

Display/set current tracking satellite & tracking information. Up to 3 satellites can be selected.

③ **Signal Level**

The “Red” line indicates the signal “Detect Level Threshold” and the “Orange” line indicates the signal “Tracking Level Threshold”. If the signal level is higher than the tracking level threshold, the signal level bar will display “Blue” color. If the signal level is lower than the tracking level threshold, the signal level bar will display “Orange” color and the antenna will stay in searching mode.

---

**Note:** If the signal level is not higher than the tracking threshold, decrease the detect and tracking level.

---

## Raymarine Satellite TV Antenna Systems

---

- ④ **GPS:** Displays the current GPS location from the Antenna information.  
The status light flashes green if the system receives a correct input of the GPS.

GPS ● 129.04 E 35.04 N

- ⑤ **Voltage:** Displays the antenna and the ACU voltage information.

**Voltage**  
Antenna : 23.0V  
ACU : 24.5V

- ⑥ **Software Information:** Displays the antenna and the ACU firmware versions

**Software Information**  
Ant. Version : V4.67  
ACU Version : V6.29

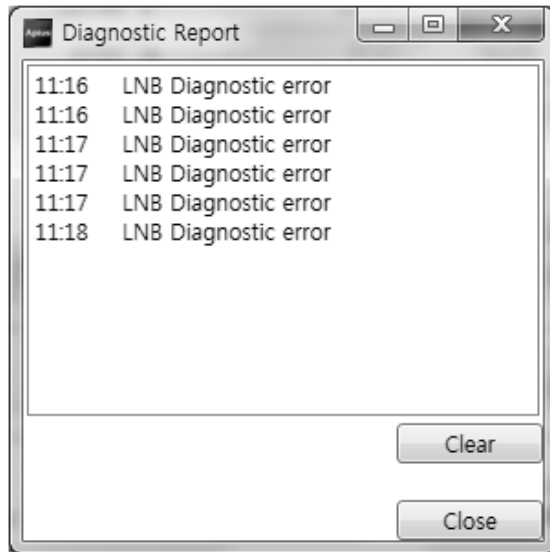
- ⑦ **Product Information:** Displays the antenna and ACU serial numbers, antenna model and ACU model.

**Product Information**  
System Model : 14  
Ant. Name : B4-419J  
Ant. Serial : S0413120912

---

⑧ **Diagnostic Error Report**

The square button next to the Diagnostic Error Report turns red when the system receives an error. Click the button to see a Diagnostic Report.




## Work View Tabs

Aptus® provides 7 Work View Tabs (Antenna Basic View, Antenna Advanced View, Satellite View, Monitor View, Graph View, Diagnostic /Network View, and GUI View) to manage the Antenna and the Satellite configuration.

How to modify the settings on Work View;



 
1. Enter the Setup mode by clicking Setup icon.



2. Tick the checkbox next to the “Set” button to modify the settings.
3. Enter the desired value then press the Set button to save the settings.

### 1. Antenna – Basic Info.

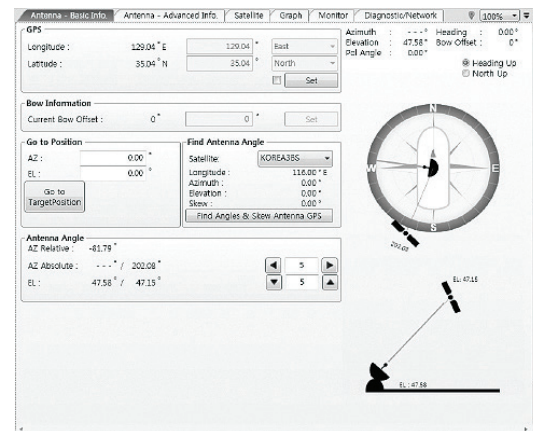This view tab provides information on the Antenna’s Current GPS location, Skew Information, and the Antenna’s Angle. This view tab uses the Antenna’s AZ and EL information in order to provide a dynamic graphic user interface (UI).




- GPS: displays and sets current antenna’s GPS.
- Bow Information: not used on STV33.
- Go to Position : The current position (angle) of the antenna is displayed.  
Push the “Go to Target Position” button after keying in the desired angle to move the antenna to target position.
- Find Antenna Angle: displays and sets the current antenna angle. Select a desired satellite from the drop-down menu, then longitude, azimuth, elevation and skew information are displayed.
  - Find Angles & Skew Antenna GPS: finds the current antenna angles and skew angle in relation to the longitude (orbit position) of the antenna’s current GPS.

- Antenna Angle: displays and sets current antenna's absolute and relative AZ (azimuth) position, EL (elevation) position and polarization (between Linear and Circular). You can move antenna azimuth and elevation position and LNB Pol angle by using the arrows or inputting a value to find the desired satellite manually.

## 2. Antenna – Advanced Info.

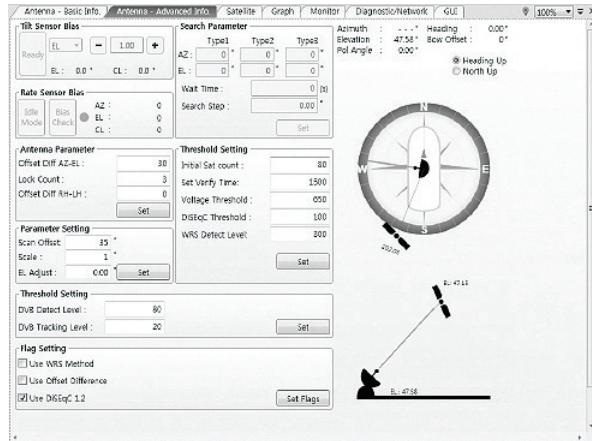This view provides information on Parameter Setting, Threshold Setting, and Flag Setting.



- Tilt Sensor Bias: not used on STV33.  
 - Rate Sensor: not used on STV33.

- Antenna Parameter: used to set the antenna parameter settings.

- Offset Diff AZ-EL: The offset AZ-EL is to offset the angle difference between Azimuth and Elevation.
- Lock Count: The Lock Count is to set the number of checking signal lock.
- Offset Diff RH-LH: The offset RH-LH is to offset the signal difference between RHCP and LHCP.

- Parameter Setting: used to set the control parameter settings.

- Scan Offset: The scan offset is to offset the angle difference between the black marker on the sub-reflector and the optical sensor.
- Scale: The scale is to control the tracking speed while antenna is tracking the satellite.
- EL Adjust: The elevation adjustment is to offset the angle difference between the mechanical elevation angle and actual elevation angle.

- Threshold Setting: set the threshold level for detecting and tracking the satellite signal.


- DVB Detect Level: displays and sets signal detection threshold level when DVB tracking mode is in use.
- DVB Tracking Level: displays and sets signal.

- Threshold Setting
  - Initial Sat Count: Set the threshold count for maintaining tracking.
  - Set Verify Time: Set the time of verifying whether the signal detected is the signal of target satellite.
  - Voltage Threshold: Set the voltage threshold. The voltage threshold is to distinguish the voltage between 13V and 18V.
  - DiSEqC Threshold: Set the DiSEqC threshold. The DiSEqC threshold is to distinguish the 0KHz tone and 22KHz tone.
  - WRS Detect Level: Set the WRS detection level.

- Flag Setting
  - Use WRS Method: Use WRS method is to determine whether the system uses “WRS Detect Level” or not. Use WRS method and “WRS Detect Level” are pair functions.
  - Use Offset Difference: Use offset difference is to determine whether the system uses “Offset Difference” or not. Use Offset Difference and “Offset Difference” are pair functions.
  - Use DiSEqC 1.2: Use DiSEqC 1.2 is to determine whether the system uses the “DiSEqC 1.2” protocol or not.

### 3. Satellite (Satellite View)

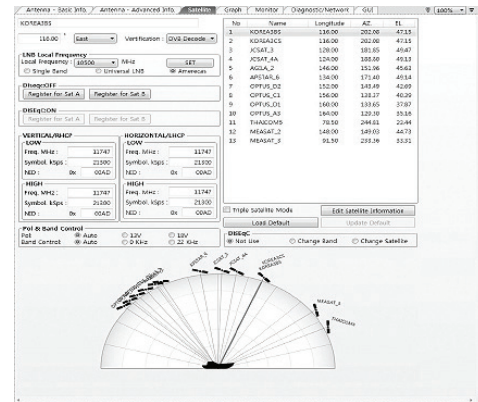The name, longitude, verification method of the satellite and LNB local frequency are displayed.



- LNB Local Frequency: Displays or sets LNB local frequency and its corresponding LNB voltage supplied. You may select pre-programmed LNB LO settings from the drop down list.

---

- Dual Satellite Mode/ Triple Satellite Mode: Registers the target satellite.

- Pushing 'Register for Sat A' or 'Register for Sat B' button after selecting the satellite in the list box makes it possible to register A or B in Dual Satellite Mode.

- Pushing 'Register for Sat A' or 'Register for Sat B' or 'Register for Sat C' button after selecting the satellite in the list box makes it possible to register A or B or C in the Triple Satellite Mode.

- Transponder information consists of frequency, symbol and NID (Network ID) of a transponder in tracking the satellite. There are four groups of transponder information. 'Vertical/ RHCP' is applied when the IRD supplies 13V, and 'Horizontal/ LHCP' is applied when the IRD supplies 18V. 'LOW' is applied when DiSEqC signal is not detected from IRD. 'HIGH' is applied when the DiSEqC signal is detected from the IRD. After modifying information, press the 'Edit Satellite Information' button, then new information is updated in the antenna.

- Pol & Band Control: The "Pol" controls 13V (Vertical/RHCP) or 18V (Horizontal/ LHCP band). The "Band" controls DiSEqC 0KHz tone (Low band) and 22KHz tone (High band). After modifying information, press 'Edit Satellite Information' button, then new information is updated in the antenna.

- Triple Satellite Mode: To select between Dual-Sat mode and Triple-Sat mode, tick the 'Triple Satellite Mode' box at the bottom of the screen.

- Edit Satellite Information: push the "Edit Satellite Information" button to update the information after modifying values.


- Load Default: Push the "Load Default" button to select a regional library file \*.rif according to your region.

- Update Default: After loading a regional library file \*.rif, push the "Update Default" button to update the system.

- Diseqc: When the operation method of DiSEqC is selected to "Change Band", DiSEqC may be used for updating the local frequency and to "Change Satellite", for updating the target satellite.

### 4. Graph

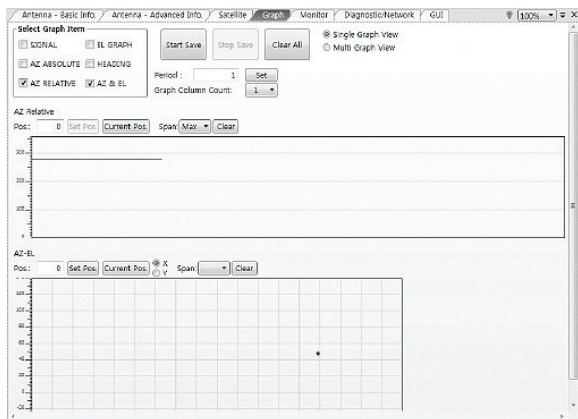This view provides information on Signal, Elevation (EL), Absolute AZ (Azimuth), Relative AZ, Heading, AZ and EL in Single or Multi graph formats.



- Select Graph Item: shows the graphs of only the checked item(s) in a Single or Multi Graph View.
- Single Graph View: shows Graph Views per each single Graph Item selected in 'Select Graph Item'.
- Multi Graph View: shows one large integrated Graph View of multiple Graph Items selected in 'Select Graph Item'.

- Start/Stop Save: the chosen item is saved within the data log. The data log which stores the information displayed in the graphs can be later used for a service technician to find out a cause of any possible problem to the antenna.

- Clear All: clears everything drawn on the Graph View window.

- Set Pos.: sets the current position as center value of each Graph Item.

- Current Pos.: moves to the location according to values of each Graph Item.

- Span: sets the Display Range(s) of each corresponding Graph Item.


- Period: displays and sets the signal sampling rate.

- Graph Column Count: makes all Graph Views show in either one or two-column format.



## 5. Monitor

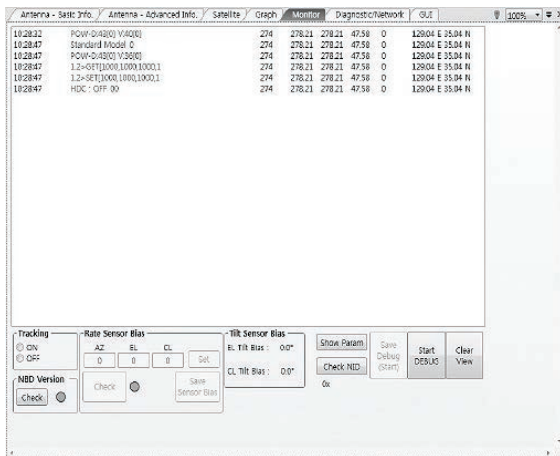This view provides a UI which can monitor all data that has been received from the ACU.



- Tracking: not used on STV33.

- Rate Sensor Bias: not used on STV33.

- Tilt Sensor Bias: not used on STV33.

- Show Param: shows the current antenna parameters.

- Check NID: verifies the NID (network ID) of the current tracking transponder. Press the NID button to obtain the NID only if the antenna is locked onto the desired satellite.

- Start Debug: starts the debug log of the antenna. The debug message will be displayed once the debug button is pressed.


- Stop Debug: stops debug logging of the antenna.

- Save Debug (Start/Stop): starts or stops saving the debug log. This button is enabled once the Start Debug button is pressed.

- Clear View: clears the debug message or log data in monitoring window.

### 6. Diagnostic / Network

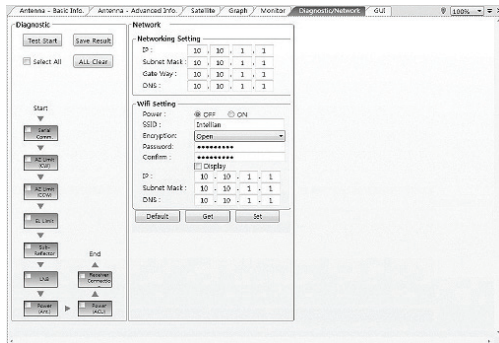This view provides Antenna Diagnostic Testing and Network Settings.



- Diagnostic : select to run a full diagnostic test or single diagnostic test.

“Green” indicator is displayed for the test under progress.

“Blue” indicates the test result as Pass while “Red” indicates the result as Fail.

“Yellow” indicates the test has been skipped.

- Serial Comm.: tests the data communication between the antenna and the ACU.
- AZ Limit (CW) : tests the azimuth limit (CW)
- AZ Limit(CCW) : tests the azimuth limit(CCW)


- EL Limit: tests the elevation limit.
- Sub-Reflector: tests the Sub-Reflector.
- LNB: tests the LNB.
- Power (Ant.): tests the antenna power to see whether or not it is within the nominal operating range.
- Power (ACU): tests the ACU power to see whether or not it is within the nominal operating range.
- Receiver Connection: tests the data communication between the antenna and the receiver.

---

### • Network Setting:

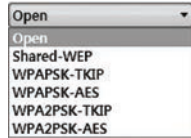IP	the network IP address.
Subnet Mask	the network subnet mask.
Gate Way	the gateway for network.
DNS	the DNS address.

### • Wifi Setting:

Power	select to turn on or off Wifi network function.
SSID	the SSID is the network name shared among all devices in a wireless network. The SSID must be identical for all devices in the wireless network. It is case-sensitive and must not exceed 8 alphanumeric characters, which may be any keyboard character. Make sure this setting is the same for all devices in your wireless network.
Encryption	The following different types of encryption are supported: 
Password	the password should be 8 alphanumeric characters.
Confirm	enter the password again to confirm it.
IP	the current wireless IP address.
Subnet	the current wireless subnet mask.
DNS	the current default wireless DNS address.

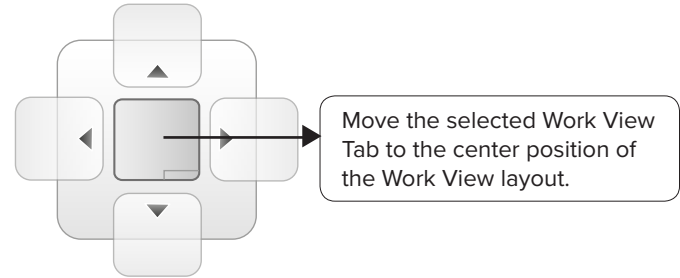
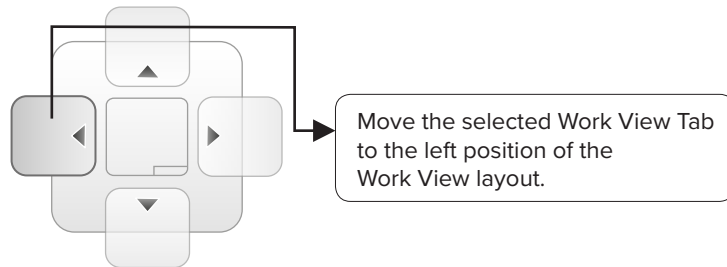
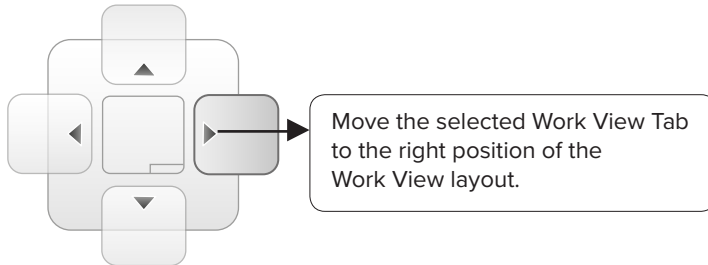
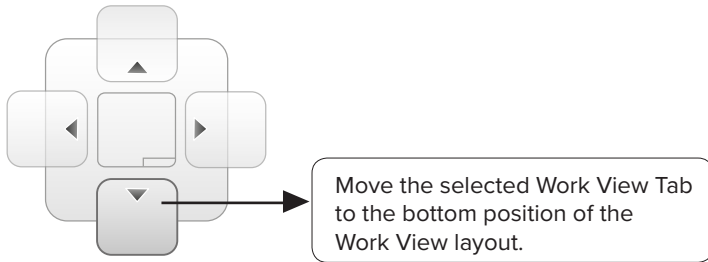
- Default: initializes the network and Wi-Fi settings.

---

**Note:** When the setting is changed, it needs to be re-connected with the modified IP address.

---





#### - Horizontal or Vertical Tab Group

The Work View Tabs can be also aligned horizontally or vertically. Without dragging them out, right-click the mouse button on a desired Tab header and select 'New Horizontal Tab Group' or 'New Vertical Tab Group' option. Selecting 'New Horizontal Tab Group' will separate a selected Tab from the rest of other Tabs then arrange it in a horizontal format. Likewise, selecting 'New Vertical Tab Group' will separate a selected Tab from the rest of other Tabs then arrange it in a vertical format.

#### - Closing the Work View Tab

 
To close the Work View Tab, right-click the mouse button on a desired Tab header and select 'Close' option in the drop down list. To close all Work View Tabs except the selected Tab, select 'Close All But This' option in the drop down list.

### - Zoom Tool

Using the Zoom tool, you can easily select the magnification you want by using Zoom In and Zoom Out bar, and Fit in Work View button.



**Fit Work View** Button: fits the current view to the Work View window size. The button toggles between the fit view and the previous view.



**Zoom In and Zoom Out** Bar: zooms in and out to expand and reduce the View to the desired size. (The zoom changes in 10% increments.)



**View Switch** Button: displays a list of the current views in a list. Choosing one of these views will display the selected view in the Work View window.



**View Name** Button: displays the current Work View name.



**Close View** Button: closes the current view.

---

## Preparation for Transportation

This is to describe how to prepare the antenna internally for transportation.


The following procedures to secure the antenna shall be strictly observed to protect it from being damaged during transportation.

1. Refer to the drawing on the right.
2. Rotate antenna left and right slowly until the limit switch is pressed.
3. Turn the antenna by 360° to the reverse direction.
4. Insert the shipping foams in front of the dish and back side of the pedestal to secure the pedestal in position with the bottom radome.
5. Cover upper part of radome being careful for it's not touching the reflector, and then assemble upper part of radome.
6. Pack Raymarine STV33 into the original package box.

---

**Note:** Don't rotate it quickly, or you may damage the antenna limit system.

---

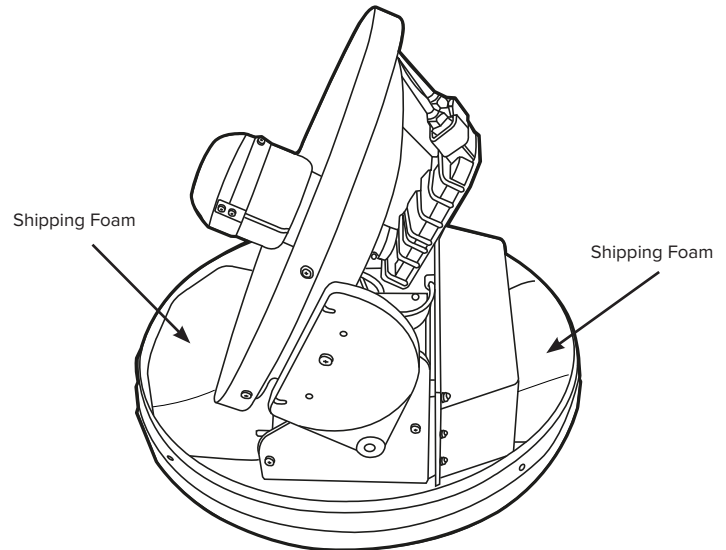

**Figure 26 : Preparation for Transportation**

# Warranty

To register your Raymarine product ownership, please visit [www.raymarine.com/warranty](http://www.raymarine.com/warranty) and register online. It is important that you register your product to receive full warranty benefits. Your unit package includes a bar code label indicating the serial number of the unit. You will need this serial number when registering your product online. You should retain the label for future reference.



---

## Appendix : STV33 Technical Specification

---

### General

---

#### Approvals

CE – conforms to	EU Directive 89/336/EEC
FCC – verified to	CFR47:Part 15

---

#### Dimensions

Satellite antenna unit	37cm (14.6") x 38cm(15")
Antenna dish diameter	33cm(13.3")
Antenna control unit	17.8cm(7")x21.7cm(8.5")x5.4cm(2.1")

---

#### Weight

Satellite antenna unit	4.5kg (9.5 lbs)
Antenna control unit	1.2kg (2.6 lbs)

---

#### Environmental

Operating temperature range	-25°C to +55°C (-13°F to +131°F)
Storage temperature range	-40°C to + 80°C (-40°F to + 176°F)
Humidity limit	95% R.H

---

Operating voltage	9 ~ 30V D C
-------------------	-------------

---

Power consumption	Typ. 30W, Max. 50W
-------------------	--------------------

---

---

### Antenna system performance

---

Frequency	Ku-band (10.7 to 12.75 GHz)
-----------	-----------------------------

---

Minimum EIRP	51 dBW
--------------	--------

---

Azimuth range	680°
---------------	------

---

Elevation range	+10° ~ +80°
-----------------	-------------

---

Ship's motion	Roll ±25°
	Pitch ±15°

---

Roll and pitch response rate	60° per second
------------------------------	----------------

---

Turn rate	60° per second
-----------	----------------

---

**Owner notes:**

**Owner notes:**



**Raymarine**

Marine House, Cartwright Drive, Fareham, Hampshire.  
PO15 5RJ. United Kingdom.

Tel: +44 (0)1329 246 700

[www.raymarine.com](http://www.raymarine.com)

***Raymarine***<sup>®</sup>

a brand by  **FLIR**<sup>®</sup>