To pair 2 speakers:

(make 2 of speakers paired first before opening your Bluetooth device,

then open the Bluetooth device and connect it with speaker)

2.1. First time to pair 2 speakers.

1) Turn on any 2 of speakers by long pressing On/off Button

2) Short Press 2 times continuously the ON/OFF button from any one of the speaker after both were turned on, the beep voice out means get into pairing mode.

the pressed 2 times continuously one will become *master* and Bluetooth indicator will start flash quickly and trying to pair with the vice one. since paired successfully, will be beep notice.

Bluetooth indicator for Master one flash regularly, Vice's one flash slowly.

3) Now you can connect your Bluetooth device(Mobile) to the speakers via Bluetooth.Once connected and unplay Music or Pause the music ,the Bluetooth indicator light for Master One glows in fixed blue , vice's keep flashing slowly. The Bluetooth indicator will be off for both items during music playing mode.

4) During Pairing mode, If you turn off the *Master* by long pressing On/Off button,

,the music of Vice oné will goes off as well, but the light will keep on.

5) During pairing mode, If you turn off the *vice* by long pressing On/Off button, Master one will keep working, Paired mode change to individually mode after 10 seconds, reopen the Vice, Master pairing the Vice automatically.

6) Deactivate the pairing function during pairing mode, short pressing 2 times On/off button continuously for any of speaker,will be beep voice out, out off the paired mode, Master one will keep working, Vice one stop playing music (but light still keep on).

2.2. Second time to pair 2 speakers (Memory function for master and vice)

2.2. If both items paired last time before turn off, they will pair themselves automatically when next time opened.

2.3. to exchange the Master one please operate as below

1) Turn off the Bluetooth device, disconnect the Bluetooth on your cell phone first

2) Press twice continuously the ON/OFF button of the new one which you need it to Master.

Art.no: HC101047

8 720168 011503

Imported by DMJ Outdoor BV 2031 CD 8 - NL



Cosy lamp Pintac Plus wood Instruction Manual



* Thank you for choosing the product. For the right handling and a long life,
Please read the instructions and in particular the safety instructions before using carefully.

WARNINGS AND PRECAUTIONS

These products and their packaging are not toys; please keep out of reach of children. Only use the DC-USB Cable provided for this product to charge this product.

This product is not designed to be used in pools or ponds.

Never charge the product in a pool, water or rain; charge in a dry, indoor location.

Disconnect the DC-USB Cable from mains power when not in use.

Do not stand or jump on this product.

Do not use this product if it is cracked or damaged.

Keep the product away from chemicals and heat.

Do not attempt to open the product.

Completed parts in package:

1)PE lamp shape*1

2)DC-USB cable for charging*1



Specification

Our Outdoor LED Bluetooth speaker are manufactured to an international standard (IP44) to protect against dust and water. This means that they can be used outdoors, but not near or in pools, provided that they are used in accordance with this Instruction Manual. This product is made of white polyethylene.

Ambient temperature for operation: -14° C to 40°C

LED: Warm White .3 levels

Rechargeable Lithium (3.7V.1*

Battery: 2000MAH)

Bluetooth effective distance: 10 meters

Charging time: Approx. 5hours

Approx. 4 to 5 hours (Max

Operation time: volume+White led light)

 
DC-USB Cable for charging Input:5 V,2A(Max)


Speaker 1*10W

OPERATION

ON/OFF BUTTON

To turn on/Off the product by Long pressing the Button for 3-5 s {ON/OFF}.



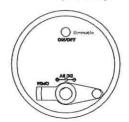

BATTERY CHARGING

Before the product is used charge the battery for 5 to 6 hours by:

Charge the light with provided USB cable which is compatible with any computer Or cell phone 5Volt out put charger(please see photo 1)

Connect the USB cable to computer USB port

Insert the USB cable to DC jack of lamp

Monitoring the charging indicator light (it will turn to green when it is fully charged).

Covering the charge cap after it is fully charged.

CAUTION: The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw it in the trash or in a fire. Do not dispose device in the standard garbage disposal sites. Dispose of the device at available Battery Recycling sites after fully discharging battery. Not doing so may violate local disposal laws and regulations. Please refer to local regulations for proper battery disposal. WARNING: *Keep the USB cable out of reach of children.

Never attempt to open the light bottom

CONNECTING VIA BLUETOOTH:

Make sure the led BT speaker is powered On before connecting your device.

- 1) To turn on the ON/OFF Button on item base, light and Bluetooth are open at the same time there will be an audible activation beep once in Bluetooth Pairing Mode. Bluetooth indicator keep flashing in Blue.
- 2) To turn on the Bluetooth of your mobile phone, select "HC-Pintac+W" from your device's Bluetooth Setting Menu. Another audible beep will sound once your device is connected.

Bluetooth indicator keep glowing in fixed Blue when no Music playing or pause the Music, it is off during playing music.

3) 2 ways to disconnect your Bluetooth Device, to turn off the product by long pressing On/off switch (no audible beep), or to turn of the Bluetooth switch of your mobile phone, there will be an audible deactivation beep indicating that the device has been disconnected from Bluetooth Mode.

Remark1: Bluetooth will be off automatically if not connected within 20minutes. The product goes into the power saving mode. But the light will keep on.

Remark2: Other power saving mode: light can be off by shortly press the on/off switch on the 4th times (after turning on the product) ,but can keep playing music.

Care and maintenance

1. for the item with built-in battery, Operation Temperature

Charge(charging): 0~40°C (Charge at a very low temperature such as blew 0°C, will be get a lower capacity and reduce cycle life of the battery)

Discharge(working): -14~40°C

Storage temperature for a long time: -20~25℃

Do not storage exceed half year. Must charge once when storage for half year. must charge the battery which with protect circuit when storage for three months.



Environmental Protection

The symbol on the product dictates that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.