 
 


# USER'S MANUAL

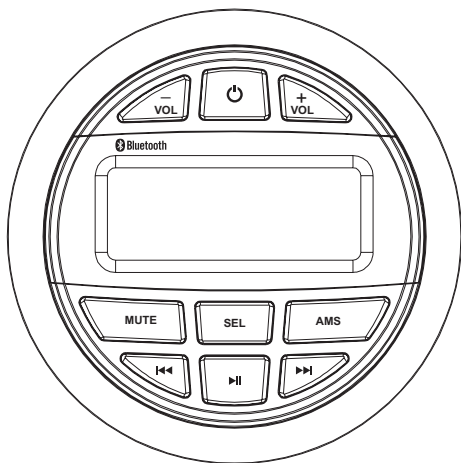

 
# WIRING DIAGRAM

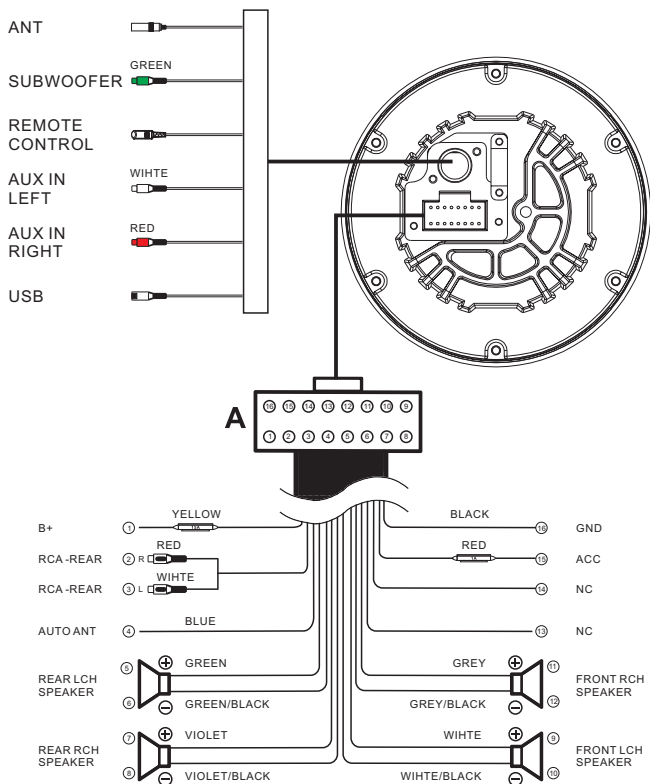

# REMOTE CONTROL

---


1. Power on/off control
2. Mode selector
3. Mute control
4. Pause button
5. Intro play button
6. Track repeat button
7. Random play button
8. Track down button
9. Track up button
10. Loud control
11. EQ button
12. Scan control
13. Audio control/function selector
14. Volume
15. Band selector
16. Auto memory control scan & store

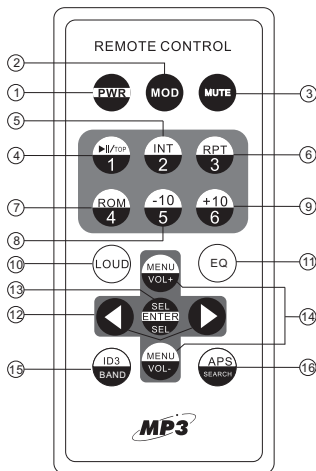

**Play MP3 / WMA files in USB.**  
**Press (-5) to select the previous folder.**  
**Press (+6) to select the next folder.**

# OPERATION

 ---

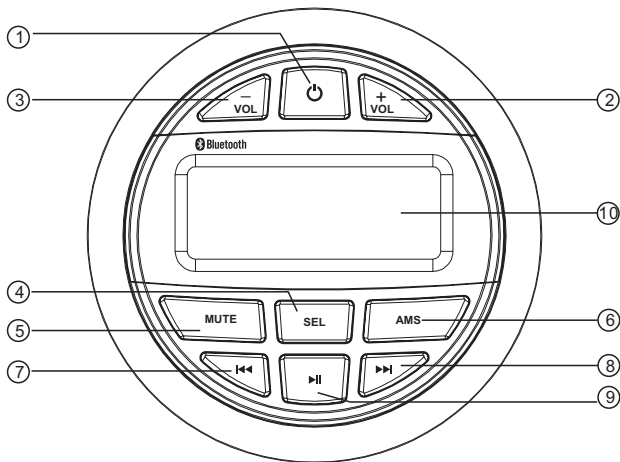

1.POW/MOD

2.VOL+

3.VOL-

4.SEL

5.MUTE/CLK

6.BAND/AMS

7.I◀◀

8.▶▶I

9.▶II/CH+

10.LCD

# FUNCTION

---

## 1. PWR/MOD

Short press start, long press shut down. Short press on boot status is a function of [mode button]. If there is [USB / SD card] in the computer, each short press will switch to another function. The state is switched back and forth between [radio-USB-SD-AUX-BT], and the power-on state automatically enters the shutdown after pressing 3 seconds. Machine status, shutdown status will be automatically booted by a short press.

## 2/3. VOL+/VOL-

Rotate the button "VOL" clockwise to increase volume "0-40", Rotate the button "VOL" anticlockwise to lower volume.

## 4. SEL

When power is on, press SEL button to select functions: BAS/TRE/BAL/FAD/LOUD/RTC.OFF.

**BASS, TREB** show will mode, **SEL** enter to **VOL** Press **BAL, FAD**, On **BASS** mode, turn VOL button is **BASS** increase 0, +1--- +7, or will be -1, -2--- -7. And when **TREB, BAL, FAD** mode are the same operation as **BASS**.

**LOUD**: Switch for bass enhancement. Turn clockwise to switch LOUD ON and OFF.

**RTC. OFF**: Switch for clock display. Turn clockwise to switch clock display ON and OFF.

# FUNCTION

---

## 5. MUTE/CLK

Short press to MUTE. Long press to display time. Press and hold for 3 seconds till the hour flashes, then press VOL button to set the hour. When finish setting the hour, press CLK and the minute will flash, then press VOL button to set the minute. When finish setting, it will return to current function mode automatically in 5 seconds. If users would like to check if the setting is successful, press CLK to check.

## 6. BAND/AMS

Repeated short press this key, the display screen will show [FM1], [FM2], [FM3],[AM1],[AM2] in the radio state, long press this key for 3 seconds, will automatically store the radio.

AMS: In the radio state, press this button to execute browsing memory on the digital button, long press can automatically search and store in the digital button 1-6. In the radio interface, short press 1-6 radio station backward selection (jumping platform), long press for storage station.

## 7/8、(◀◀ ▶▶) TUNE/TRACK BUTTONS

A. When long pressing the TUNE/TRACK button (more than 2 seconds) during play. The speed

B. Short press the button during playback to skip to next to track or back one track.

## 9.▶||/CH+

At disc playback mode, press ▶|| button to pause disc playback and the CD icon on LCD DISPLAY blinking, press it again to resume normal disc playback. Press ▶|| button for 2 seconds will start disc playback at the first track..

In the radio interface,press longly to select Radio Station 1-6 backward (skip),press and hold for seconds to store stations.

## 10.LCD

# Bluetooth Operation

---

## Instructions for Bluetooth

Turn on Bluetooth on the cellphone, search Bluetooth device name “**CAR BT**” and press match or connect, there will be a Bluetooth icon besides the successful connected Bluetooth devices and the word **CONNRE** will display on the screen. If pairing is successful, **BT AUD** mode will show in **POWER/MOD** function mode. In **BT AUD** mode, users can play music.

# INSTALLATION SIZE

---

