



Installation instructions

Required tools:

- ◆ towel
- ◆ plastic gloves
- ◆ utility knife
- ◆ tape measure
- ◆ a pair of scissors
- ◆ pencil or marker
- ◆ adhesive spreader with 1 mm teeth
- ◆ kit gun
- ◆ roller

Required materials:

- ◆ SecuTred non skid deck sheet
- ◆ Adhesive: Bostik polyurethane adhesive or Bostik neoprene contact adhesive.



Sizes available:


- ◆ STAZO SecuTred is available in rolls of 16 mtr long and 1 mtr. wide (40") and can be cut and bought by the 10 cm (4").



How to make SecuTred pads



- ◆ Make moulds of the required pads of drawing paper or thin plywood.
- ◆ Place the mould(s) on the SecuTred sheet and draw a line along the mould with a marker

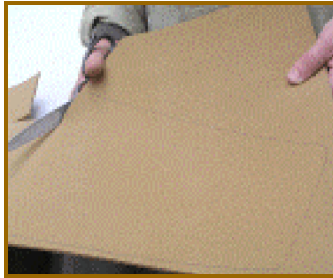

- ◆ Now cut or trim the SecuTred pad(s) at the marked line






- ◆ Sand a little radius on the edges

The installation of the SecuTred pads

When using the Bostik 2639 construction adhesive

- ◆ Clean the entire surface
- ◆ Make paper mask(s). Use the SecuTred pads just being made for this purpose.

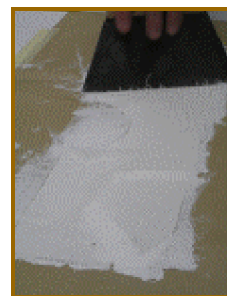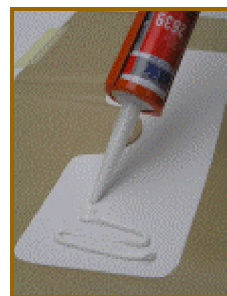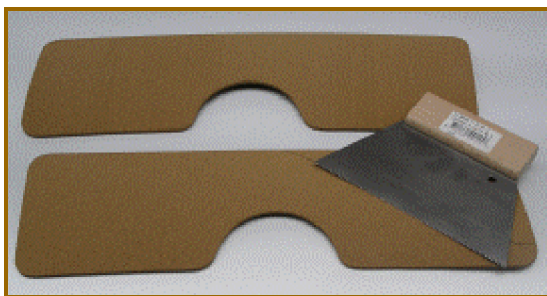

Pads just being made to use to cut paper mask(s) and an adhesive spreader with 1 mm teeth

- ◆ Put the paper mask at the right place.
- ◆ Apply the Bostik 2639 adhesive with a kit gun and spread the adhesive with the spreader.
- ◆ Keep the mask in place with cello tape and keep the spreader in an angle of 90 degrees towards the SecuTred in order to be sure the right volume of adhesive is applied.

- ◆ Now carefully remove the paper mask(s) and bring the SecuTred pad carefully in place.

- ◆ When the SecuTred pad is in place press the pad firmly into the applied Bostik 2639 adhesive by using a roller.

- ◆ You may use water filled bottles.

- ◆ Immediately remove adhesive remainders with SIMSON cleaner E.



When using Bostik neoprene contact adhesive

- ◆ Clean the entire surface
- ◆ Make paper mask(s). Use the SecuTred pads just being made.
- ◆ Apply the Bostik contact adhesive both at the SecuTred pads and the surface
- ◆ Carefully follow the instructions provided at the pack.
- ◆ Now carefully apply the pads at the surface.
- ◆ Use the roller to press the SecuTred pads firmly at the surface.

