


- 1) **Items supplied in the box**
 a) S20 Unit
 b) Information Card
 c) Warranty
 d) Oral tube bracket
 e) Oral tube to unit adaptor
 f) S20 pouch
 g) Crocodile clip
 h) User Manual
- Items required for fitting unit to lifejacket**
 a) S20 Unit
 b) Information Card
 g) Crocodile clip
 h) User Manual



- 4) Attach the crocodile clip (a) to the integrated PLB/Light Bracket (b) as shown.

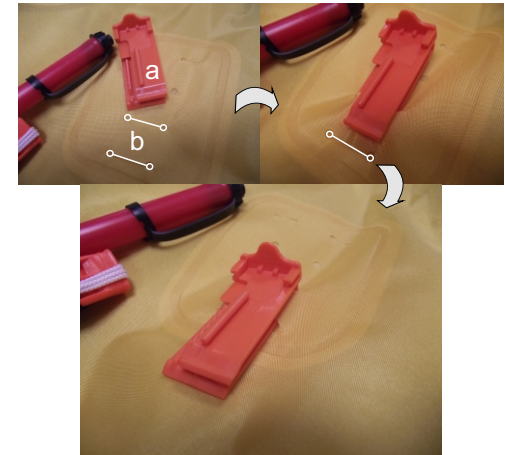

- 2) The S20 is supplied with the orange lanyard loosely tied onto the white section of the S20
- Undo this knot, so there is a short lanyard to the orange tab and a long loose lanyard.



- 5) Attach the S20 unit (a) to the crocodile clip (b) by sliding it down the recess until an audible click is heard.



- 3) Open up the left side of the lifejacket to reveal the integrated PLB/Light Bracket.



- 6) Once the unit is attached to the lifejacket tie the orange lanyard to the bladder retainer using a bowline.

Fold the bottom of the bladder as outlined in the standard packing procedure in the User manual, to enable the lanyard to reach the tie in point.



- 7) Secure the end of the excess cord to the white section with a bowline.



- 8) To activate, remove the orange tab from the unit



- 9) Lay the excess lanyard and the orange tab to the side of the unit when packing the lifejacket

