HORSESHOE LIFEBUOY SET






Horseshoe Lifebuoy set

A traditional horseshoe lifebuoy foam filled with wipe clean cover. The horseshoe is available on it's own or with a SOLAS approved led light with lithium battery and mounting bracket.

This is the perfect set with highly effective automatic light system. Available in 2 colours.

Contents

- 1 x Foam filled lifebuoy
- 1 x Multi fit mounting bracket
- 4 x Bolts for multi fit mounting bracket
- 1 x SOLAS approved LED light with minimum 3 years life

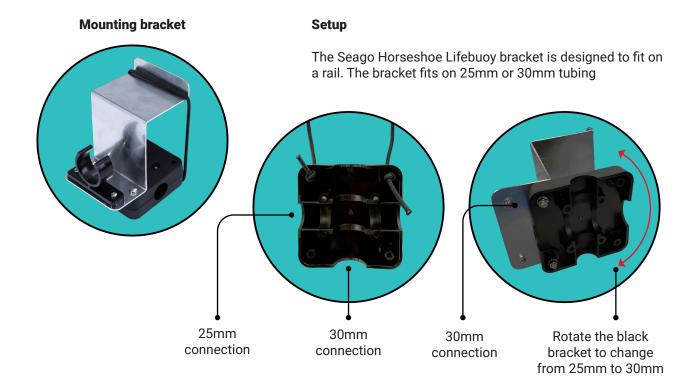

The black plastic rail mount bracket is ready to install on a horizontal 25mm rail. If you require the bracket to mount on a 30mm horizontal rail you will need to:

- open the bracket by removing the 4 bolts so you can see inside the bracket.
- · Cut out the ends of each half of the bracket to reveal the 30mm channel.

If you require the bracket to fit on to a vertical rail either 25mm or 30mm:


- Remove the 2 bolts holding the aluminium section.
- Turn the black plastic mounting bracket 90°
- Refit the aluminium section in the new position.

HORSESHOE LIFEBUOY SET



Attaching the SOLAS light

Before use the SOLAS light should be attached to the horseshoe lifebuoy by tying the lanyard to the lifeline of the lifebuoy. See image below.

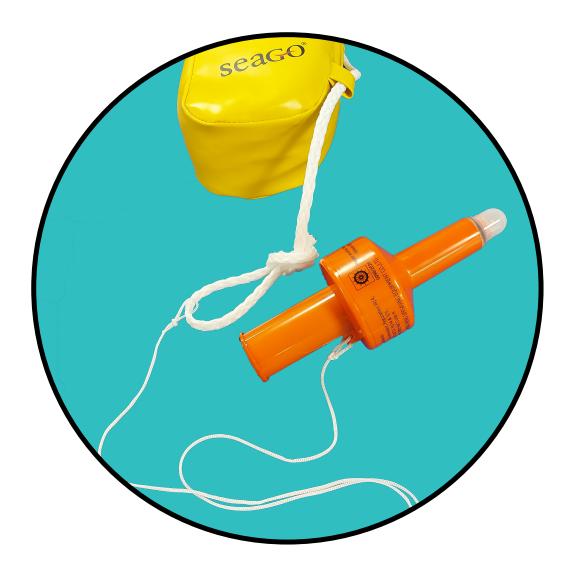

SOLAS light usage and testing

The SOLAS light black cap should be tied to the light holder. when deployed this will pull away and allow the contacts of the light to be exposed. upon contact with water the SOLAS light with ignite and start to flash.

The light can be tested by completing the circuit with water. The light will flash, when the connection is broken the light will stop flashing.

The battery is non replaceable, the SOLAS light unit must be replaced if it no longer works or has signs of damage.